


SUPPLEMENTARY INSTRUCTION BOOKLET

HEATER

TYPE TR

Centrifugal / Rooftop

GB139g

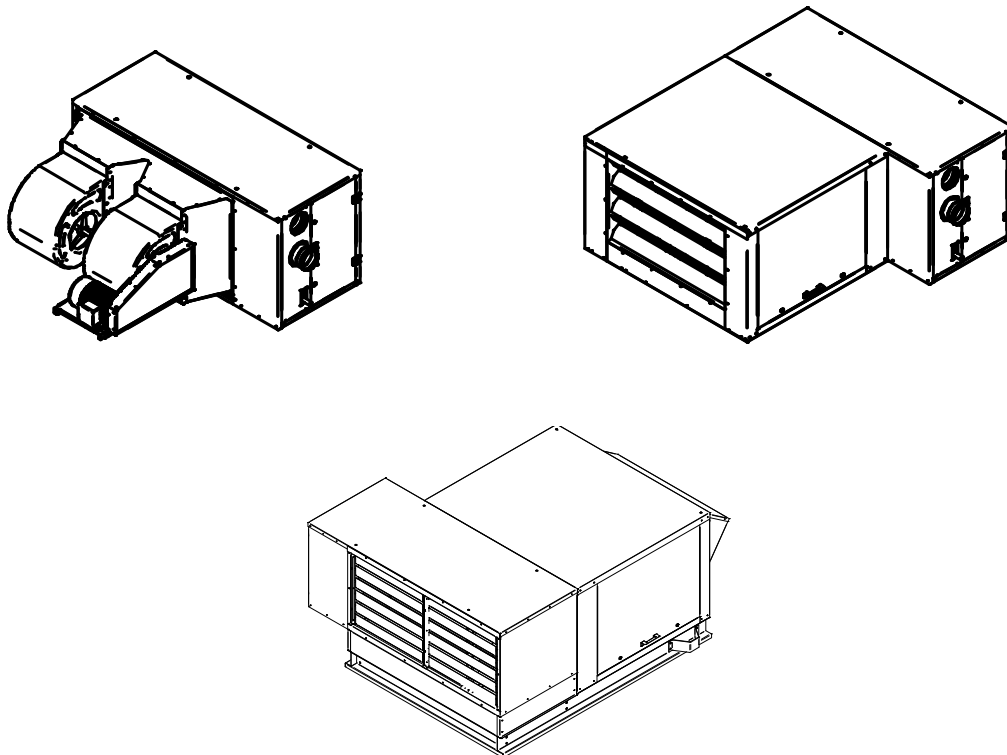

READ THIS DOCUMENT BEFORE COMMENCING INSTALLATION.
THE USER MUST BE INSTRUCTED IN USING THE APPLIANCE.
KEEP THIS DOCUMENT NEAR THE APPLIANCE.

Contents

1	FOREWORD	4
2	DESIGN	4
2.1	TR-SERIES (STANDARD HEATERS)	4
2.2	TR-A SERIES	4
2.2.1	<i>TR-A with duct connection on front.</i>	4
2.2.2	<i>TR-A with fan box</i>	5
2.3	TR-C TR HEATER WITH CENTRIFUGAL FAN	5
2.3.1	<i>TR-C Basic version:</i>	5
2.3.2	<i>TR-C with Fan box:</i>	5
2.4	TR-R ROOFTOP UNIT:	6
3	TECHNICAL DATA	7
4	INSTALLATION	9
4.1	GENERAL:	9
4.2	SUSPENSION / POSITIONING	9
4.2.1	<i>Suspension TR C basic and TR C with Fan box</i>	9
4.2.2	<i>Positioning TR R Rooftop</i>	9
4.3	DUCT CONNECTION:	9
4.3.1	<i>Air resistance and accessories</i>	10
4.3.2	<i>Minimum distance to bends or other appendages</i>	10
4.3.3	<i>Air Duct</i>	10
4.4	<i>EXAMPLES OF INDUSTRIAL INSTALLATIONS</i>	11
5	ELECTRICAL CONNECTION	12
5.1	GENERAL	12
5.2	230VAC VERSION	12
5.3	3-PHASE 400VAC VERSION	12
6	ADJUSTING THE VENTILATOR	13
6.1	EXCESS AMPERAGE, TOO MUCH AIR DISPLACEMENT	13
6.2	INSUFFICIENT AIR DISPLACEMENT	13
7	ELECTRICAL DIAGRAM	14
7.1	TR-A 24 – 80	14
7.2	TR-A 100	15
7.3	230VAC VERSION WITH EXTERNAL THERMAL SAFETY DEVICE	16
7.4	3-PHASE 400VAC VERSION	17
7.5	3-PHASE 400VAC VERSION WITH SOFT STARTER	18
8	DIMENSIONS	19
8.1	TR24 - 50 CENTRIFUGAL / ROOFTOP	19
8.1.1	<i>TR24 C - 50 C Basic</i>	19
8.1.2	<i>TR24 - 50 A / C Fanbox</i>	20
8.1.3	<i>TR24 R & TR28 R Rooftop</i>	21
8.1.4	<i>TR40 & 50 R Rooftop</i>	22
8.2	TR60 - 100 CENTRIFUGAL / ROOFTOP	23
8.2.1	<i>TR60 C - 100 C Basic</i>	23
8.2.2	<i>TR60 - 100 A /C Fan box</i>	24
8.2.3	<i>TR60 R & 80 R Rooftop</i>	25
8.2.4	<i>TR100 R Rooftop</i>	26
8.3	TR125 CENTRIFUGAL / ROOFTOP	27
8.3.1	<i>TR125 & 150 C Basic</i>	27
8.3.2	<i>TR125 & 150 C Fanbox</i>	28
8.3.3	<i>TR125 R Rooftop</i>	29
8.3.4	<i>TR150 R Rooftop</i>	30

8.4	CONSTRUCTION FRAMES	31
8.4.1	<i>Rooftop Frame TR24 R – 50 R</i>	31
8.4.2	<i>C Frame TR24 R – 50 C / R</i>	32
8.4.3	<i>Rooftop frame TR60 R-150 R</i>	33
8.4.4	<i>C Frame TR60 -150 C / R</i>	34
8.5	TR ROOFTOP + AIR OUTLET MODULE	35
8.5.1	<i>TR24 R - 50 R Rooftop + Air outlet module</i>	35
8.5.2	<i>TR60 R - 100 R Rooftop + Air outlet module</i>	36
8.5.3	<i>TR125 R - 150 R Rooftop + Air outlet module</i>	37

1 Foreword

These operating and installation instructions are a supplement for the TR series heater combined with a ventilator for systems which require greater external pressure.

- TR: Standard series with standard axial fan
 - No possibilities for extra air accessories
- TR-A: Heater with more powerful axial fan
 - Limited possibilities for extra air accessories. Maximum pressure 60Pa
 - Duct outlet (max 60Pa)
 - Fan box with dampers and/or filters
 - No combination of these 2 options possible
- TR-C: Heater with centrifugal fan.
 - External pressures up to 300Pa (higher values on request)
 - Different accessories possible
 - Duct inlet / outlet connection
 - Fan box with optional dampers and/or filter panels
 - Rooftop version
 - Combinations of above.

This installation and user manual for the TR heater is the leading document for the installation of this appliance. These operating and installation instructions deal with the specific matters that apply to supplementary use and installation of a centrifugal design.

2 Design

2.1 TR-series (standard heaters)

These are standard TR heaters. There are NO air accessories available. The fans behind these units cannot cope with higher air resistance.

2.2 TR-A series


These heaters have more powerful axial fans and can cope with external pressures up to 60Pa. This gives the possibility to add air accessories. Available models are 24 to 100kW.

2.2.1 TR-A with duct connection on front.

The heater pulls its air from the room and blows it into an air duct.

This duct needs to be dimensioned in such a way that the static pressure inside this duct does not exceeds 60Pa.


Warning: When the air resistance in the duct is too high, the amount of air over the heater will reduce too much and the heat exchanger will overheat. This can lead to permanent damage of the heater!!

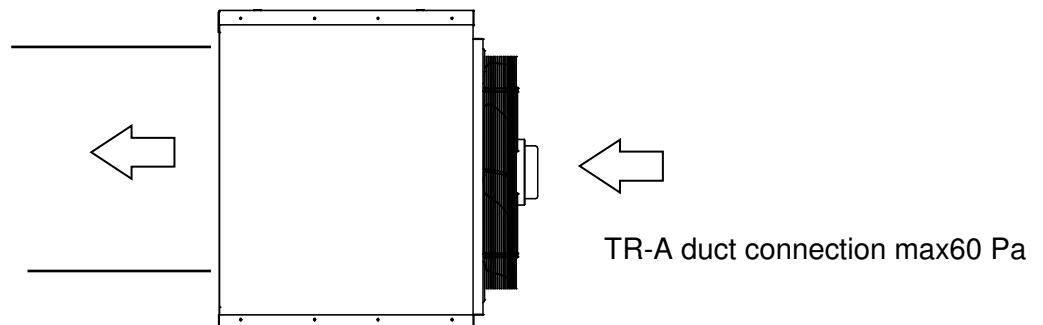

2.2.2 TR-A with fan box

The TR heater sucks its air from a fan box from behind. Dampers and or filters can be mounted in this box, depending on the customer demands. The heater blows the air direct into the building. In this configuration it is not possible that the air is distributed through a duct system. This would give too much air resistance and would lead to overheating the heat exchanger.

Warning: When the air resistance in the duct is too high, the amount of air over the heater will reduce too much and the heat exchanger will overheat. This can lead to permanent damage of the heater!!

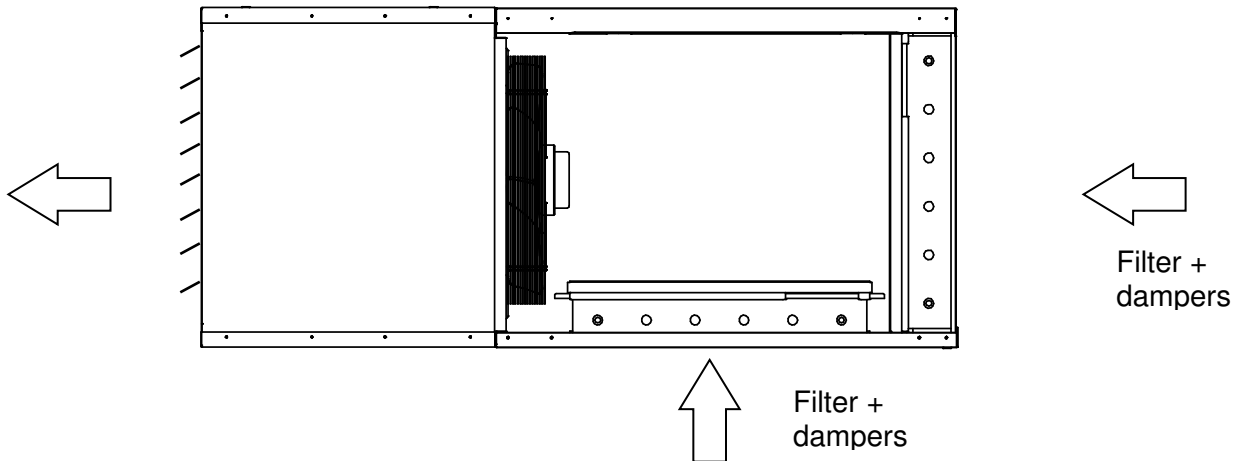


2.3 TR-C TR heater with centrifugal fan


The TR air heater with centrifugal system ventilator(s) is available with the following pressure: 60, 120, 180, 240 and 300 Pa. The pressure level of the heater is selected depending on the air resistance in the installation.

2.3.1 TR-C Basic version:

TR-C heater with centrifugal fan is used to blow into a duct system. The duct connection is standard on this heaters

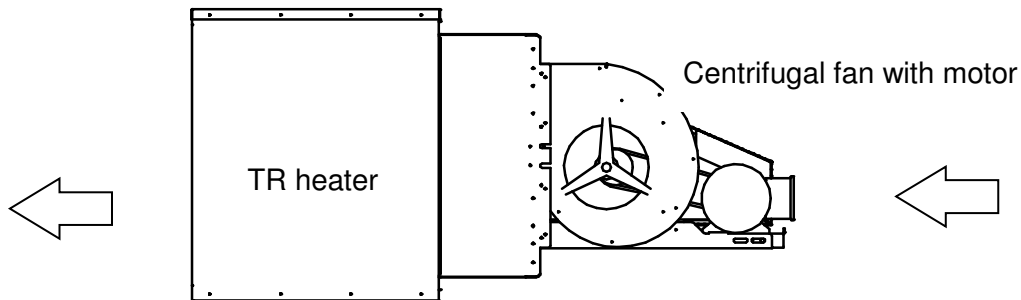

2.3.2 TR-C with Fan box:

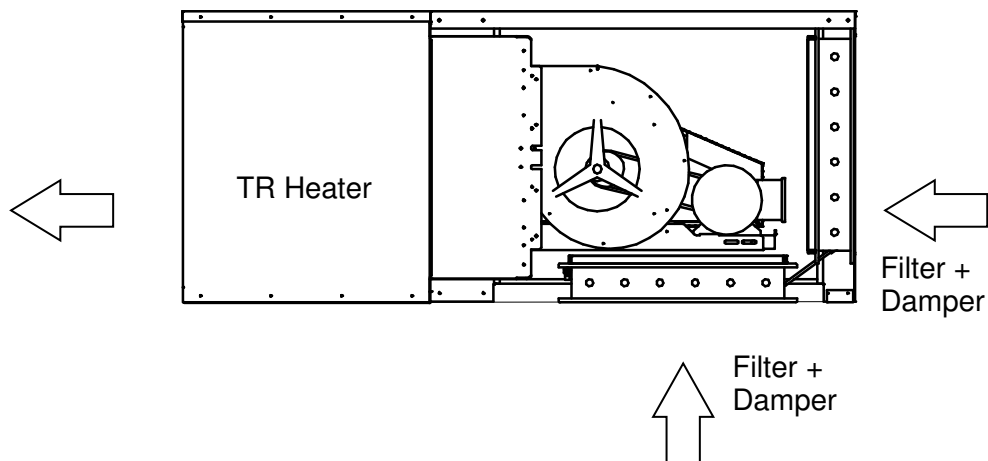

The heater pulls its air from a fan box. In this fan box dampers and or filters can be mounted on customer demands. The unit can blow its air in a duct system or free into the room

Outlet:

- Flange connection for ducting (standard)
- Discharge grill on front (optional)

Suction, inlet side:

- unrestricted suction (basic version)
- Fan box with on either top or bottom and/or rear side flange connection for ducting
- Optional: dampers with interlink fresh and recirculation air and filter sets.

Construction frame:


- C frame: optional

Additional:

- Isolation Fan box: optional
- Soft starter standard: 3-Phase 400 Vac version from 2,2 kW motor power capacity.

2.4 TR-R Rooftop unit:

TR air heater with centrifugal ventilator, fan box and Rooftop construction frame

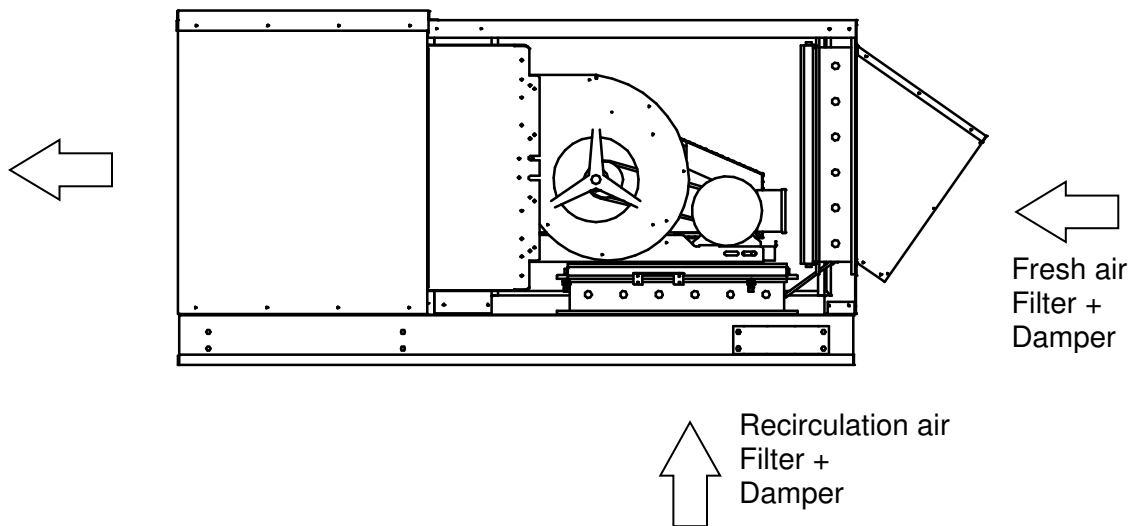

Discharge, outlet side:

- Flange connection for ducting (standard)
- Air outlet module, see 8.8

Suction, inlet side:

- Fan box with on either top or bottom and/or rear side flange connection for ducting
- Optional: dampers with interlink fresh and recirculation air and filter sets.

Construction frame:

- Rooftop frame
- C Frame (optioneel)

Additional:

- Isolation heater + Fan box: standard
- Soft starter standard: 3-Phase 400 Vac version from 2,2 kW motor power capacity.
- Frost protection burner compartment : optional

3 Technical data

System fan: Axiaal 1-Fase 230 Vac / 50 Hz											
Type:				TR24 A	TR28 A	TR40 A	TR50 A	TR60 A	TR80 A	TR100 A	
Ext. Press max 60Pa	Airflow max.	m ³ /h		3000	3000	4000	5000	6000	7500	9000	
	Throw horizontal max.	m		16	16	22	26	28	30	30	
	Voltage(@50 Hz)	V		230	230	230	230	230	230	230	
	Absorbed power	W		300	300	450	600	600	750	1100	
	Amps	A		1,3	1,3	2	2,6	2,5	3,3	4,8	
Weight											
TRA basis			kg	65	65	77	95	145	165	220	
TRA ventilatoromkasting			kg	115	115	127	145	195	215	285	

Centrifugal fan 1-Fase 230 Vac / 50Hz												
Type:				TR24C	TR28C	TR40C	TR50C	TR60-2C	TR80-2C	TR100-2C	TR125-2C	TR150-2C
ext. Pressure	Air output max.	m ³ /h		3150	3200	4250	5800	6600	8750	10.400	14.250	16.000
	Throw horizontal	m		16	16	22	26	28	30	30	30	30
60	ΔP [Pa]											
	Electrical supply (50 Hz)	V		230	230	230	230	230	230	230	n.v.t.	n.v.t.
	Power consumption	W		520	520	770	1000	900	1050	1275		
	Power consumption motor nom.	A		2,5	2,5	3,6	4,7	4,0	4,7	5,2		
	Power consumption motor max.	A		3,1	3,1	4,2	5,5	5,5	5,5	7,3		
120	Electrical supply (50 Hz)	V		230	230	230	230	230	230	230	n.v.t.	n.v.t.
	Power consumption	W		570	570	820	1050	1050	1320	1550		
	Power consumption motor nom.	A		2,8	2,8	3,9	4,9	4,8	5,7	6,5		
	Power consumption motor max.	A		3,1	3,1	4,2	5,5	5,5	7,3	7,3		
	Electrical supply (50 Hz)	V		230	230	230	230	230	230	230	n.v.t.	n.v.t.
180	Power consumption	W		620	620	1000	1100	1250	1700	1750		
	Power consumption motor nom.	A		3,1	3,1	4,7	5,1	5,6	7,9	8,5		
	Power consumption motor max.	A		4,2	4,2	5,5	5,5	7,3	9,9	9,9		
	Electrical supply (50 Hz)	V		230	230	230	230	230	230	230	n.v.t.	n.v.t.
	Power consumption	W		780	780	1050	1330	1700	1700			
240	Power consumption motor nom.	A		3,9	3,9	4,9	6,0	8,1	8,1			
	Power consumption motor max.	A		4,2	4,2	5,5	7,3	9,9	9,9			
	Electrical supply (50 Hz)	V		230	230	230	230	230	230	n.v.t.	n.v.t.	n.v.t.
	Power consumption	W		920	920	1270	1450	1800				
	Power consumption motor nom.	A		4,4	4,4	5,7	6,6	8,6				
300	Power consumption motor max.	A		5,5	5,5	7,3	7,3	9,9				
	Electrical supply (50 Hz)	V		230	230	230	230	230	n.v.t.	n.v.t.	n.v.t.	n.v.t.
	Power consumption	W		920	920	1270	1450	1800				
	Power consumption motor nom.	A		4,4	4,4	5,7	6,6	8,6				
	Power consumption motor max.	A		5,5	5,5	7,3	7,3	9,9				

From January 2018, the following table applies to the TR-3 Rooftop version.

Centrifugal fan, TR-3 Rooftop (ERP2018) 1-Fase 230 Vac / 50Hz												
Type:				TR24-3R	TR28-3R	TR40-3R	TR50-3R	TR60-3R	TR80-3R	TR100-3R	TR125-3R	TR150-3R
ext. Pressure	Air output max.	m ³ /h		4000	4000	5000	6500	7500	10.000	12.000	16.000	17.500
	Throw horizontal	m		16	16	22	26	28	30	30	30	30
60	ΔP [Pa]											
	Electrical supply (50 Hz)	V		230	230	230	230	230	230	230	n.v.t.	n.v.t.
	Power consumption	W		570	570	820	1050	1050	1320	1550		
	Power consumption motor nom.	A		2,8	2,8	3,9	4,9	4,8	5,7	6,5		
	Power consumption motor max.	A		3,1	3,1	4,2	5,5	5,5	7,3	7,3		
120	Electrical supply (50 Hz)	V		230	230	230	230	230	230	230	n.v.t.	n.v.t.
	Power consumption	W		620	620	1000	1100	1250	1700	1750		
	Power consumption motor nom.	A		3,1	3,1	4,7	5,1	5,6	7,9	8,5		
	Power consumption motor max.	A		4,2	4,2	5,5	5,5	7,3	9,9	9,9		
	Electrical supply (50 Hz)	V		230	230	230	230	230	230	230	n.v.t.	n.v.t.
180	Power consumption	W		780	780	1050	1330	1700	1700			
	Power consumption motor nom.	A		3,9	3,9	4,9	6,0	8,1	8,1			
	Power consumption motor max.	A		4,2	4,2	5,5	7,3	9,9	9,9			
	Electrical supply (50 Hz)	V		230	230	230	230	230	n.v.t.	n.v.t.	n.v.t.	n.v.t.
	Power consumption	W		920	920	1270	1450	1800				
240	Power consumption motor nom.	A		4,4	4,4	5,7	6,6	8,6				
	Power consumption motor max.	A		5,5	5,5	7,3	7,3	9,9				
	Electrical supply (50 Hz)	V		230	230	230	230	230	n.v.t.	n.v.t.	n.v.t.	n.v.t.
	Power consumption	W		920	1270	1450	1800					
	Power consumption motor nom.	A		4,4	5,7	6,6	8,6					
300	Power consumption motor max.	A		5,5	7,3	7,3	9,9					

Centrifugal fan 3-Phase 400 VAC / 50Hz				TR24C	TR28C	TR40C	TR50C	TR60-2C	TR80-2C	TR100-2C	TR125-2C	TR150-2C
Type:												
ext. Pressure	Air output max.	m3/h	3150	3200	4250	5800	6600	8750	10.400	14.250	16.000	
Δp [Pa]	Throw horizontal	m	16	16	22	26	28	30	30	30	30	
60	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	520	520	770	1000	900	1050	1275	2300	2600	
	Power consumption motor nom.	A	0,9	0,9	1,3	1,8	1,6	1,8	2,1	3,9	4,4	
	Power consumption motor max.	A	1,1	1,1	1,5	2,1	2,1	2,1	2,8	5,1	5,1	
120	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	570	570	820	1050	1050	1320	1550	2325	2660	
	Power consumption motor nom.	A	1,0	1,0	1,4	1,9	1,9	2,3	2,6	3,9	4,5	
	Power consumption motor max.	A	1,1	1,1	1,5	2,1	2,1	2,8	2,8	5,1	5,1	
180	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	620	620	1000	1100	1250	1700	1750	2575	2970	
	Power consumption motor nom.	A	1,1	1,1	1,8	2,0	2,3	2,9	3,0	4,4	5,0	
	Power consumption motor max.	A	1,5	1,5	2,1	2,1	2,8	3,7	3,7	5,1	6,3	
240	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	780	780	1050	1330	1700	1700	2050	2850	3900	
	Power consumption motor nom.	A	1,4	1,4	1,9	2,3	3,0	3,0	3,4	4,8	6,5	
	Power consumption motor max.	A	1,5	1,5	2,1	2,8	3,7	3,7	5,1	6,3	8,3	
300	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	920	920	1270	1450	1800	2000	2450	3900	4200	
	Power consumption motor nom.	A	1,7	1,7	2,2	2,6	3,2	3,3	4,1	6,5	7,0	
	Power consumption motor max.	A	2,1	2,1	2,8	2,8	3,7	5,1	5,1	8,3	8,3	

From January 2018, the following table applies to the TR-3 Rooftop version.

Centrifugal fan, TR-3 Rooftop (ERP2018) 3-Phase 400 VAC / 50Hz				TR24-3R	TR28-3R	TR40-3R	TR50-3R	TR60-3R	TR80-3R	TR100-3R	TR125-3R	TR150-3R
Type:												
ext. Pressure	Air output max.	m3/h	4000	4000	5000	6500	7500	10.000	12.000	16.000	17.500	
Δp [Pa]	Throw horizontal	m	16	16	22	26	28	30	30	30	30	
60	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	570	570	820	1050	1050	1320	1550	2325	2660	
	Power consumption motor nom.	A	1,0	1,0	1,4	1,9	1,9	2,3	2,6	3,9	4,5	
	Power consumption motor max.	A	1,1	1,1	1,5	2,1	2,1	2,8	2,8	5,1	5,1	
120	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	620	620	1000	1100	1250	1700	1750	2575	2970	
	Power consumption motor nom.	A	1,1	1,1	1,8	2,0	2,3	2,9	3,0	4,4	5,0	
	Power consumption motor max.	A	1,5	1,5	2,1	2,1	2,8	3,7	3,7	5,1	6,3	
180	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	780	780	1050	1330	1700	1700	2050	2850	3900	
	Power consumption motor nom.	A	1,4	1,4	1,9	2,3	3,0	3,0	3,4	4,8	6,5	
	Power consumption motor max.	A	1,5	1,5	2,1	2,8	3,7	3,7	5,1	6,3	8,3	
240	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	920	920	1270	1450	1800	2000	2450	3900	4200	
	Power consumption motor nom.	A	1,7	1,7	2,2	2,6	3,2	3,3	4,1	6,5	7,0	
	Power consumption motor max.	A	2,1	2,1	2,8	2,8	3,7	5,1	5,1	8,3	8,3	
300	Electrical supply (50 Hz)	V	400	400	400	400	400	400	400	400	400	400
	Power consumption	W	920	1270	1450	1800	2000	2450	3900	4200	4200	
	Power consumption motor nom.	A	1,7	2,2	2,6	3,2	3,3	4,1	6,5	7,0	7,0	
	Power consumption motor max.	A	2,1	2,8	2,8	3,7	5,1	5,1	8,3	8,3	8,3	

TRC basic		kg	115	120	135	150	215	225	235	300	350
TRC with Fan box		kg	165	170	185	200	265	275	300	360	420
TRC rooftop		kg	215	220	235	250	365	375	400	460	520

Dimensions, see Chapter 8.

4 Installation

4.1 General:

General installing instructions are provided in the TR instruction manual for appliances with axial ventilators. This supplementary booklet presents specific installing instructions for the centrifugal and rooftop version of the TR.

- The appliance must have a clear suck and throw. If these are blocked the heater will overheat. There should not be materials within 5m in front of the heater when there is a free outlet. Pay particular attention to flammable materials
- Take into account the possibility to open the door of the heater for necessary service and maintenance work.
- Make sure that after fitting, there is no mechanical tension on any connected gas or electrical supplies.

4.2 Suspension / positioning

4.2.1 Suspension TR C basic and TR C with Fan box

The heater is provided with fixing points for suspension, consisting of 4 or 6x M10 threaded sockets on top.

Check and make sure that the support is strong enough.

For the TR C with Fan box there is an C frame optional available. (8.7.2 / 8.7.4)

4.2.2 Positioning TR R Rooftop

The TR Rooftop must be placed on a so called platform.

- Rooftop frame
- C frame (optional)

See example drawing of the rooftop frame Chapter 8.7.


Check if the support is strong enough.

4.3 Duct connection:

The discharge side of the heater has a connection flange on which a duct can be fixed with M5 bolts. Dimensions: see chapter 8.

The Rooftop version is also optional available with a discharge down flow module.

4.3.1 Air resistance and accessories

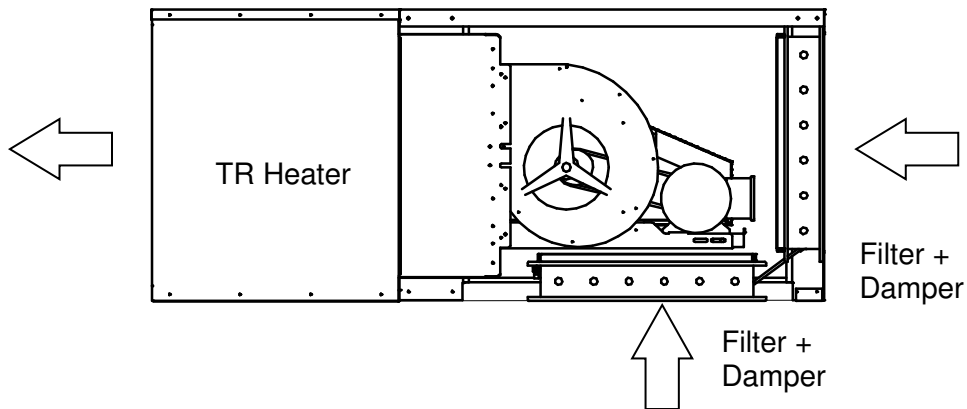

Application of basic accessories can imply following resistance losses:

Fan box	20 Pa
Dampers	10 Pa
Filter panel (Class EU2), clean	40 Pa
Fresh air grill	10 Pa
Discharge down flow module	20 Pa

4.3.2 Minimum distance to bends or other appendages

It is essential that the heat exchanger is being blown equally over the full frontal surface. If the air, for example only covers the lower part of the exchanger, the upper region will probably get no cooling and get overheated.

De TR C heater should have at least 1 meter of straight duct with a cross section that is equal to that of the flange connection, behind the exchanger.

If these conditions are not being fulfilled, the heat exchanger will get thermally overloaded. This will result in heater errors and damage to the exchanger (shorter lifetime). This can mean invalidation of warranty!

4.3.3 Air Duct

This paragraph gives a general representation of the requirements a simple duct system must meet. The reader is referred to specialist installers for accurate calculations of more complicated systems.

The table below shows the diameter of the appropriate size round air duct (standard sizes for spirally seamed ducting) for the given air displacement [m³/h] and acceptable speed of the air [m/sec].


The ducts must be airtight, internally smooth and sufficiently heat resistant. The ducting connection to the heater must be made of metal for a length of no less than 2 meters and run smoothly into the connector sizes of the appliance without any buffeting edges.

Bends in square section ducts must be provided with baffles conducting the air. Sizes and the resistance of air grilles must be requested from the manufacturer.


Air displacement	Air speed	Duct size (mm)
m ³ /h	m/s	Round or square
15.000	6,5	900
12.500	6,5	800
10.000	6,3	750
9.000	6,3	710
8.000	5,6	710
7.000	5,4	630
6.000	5,4	630
5.000	4,9	600
4.000	4,5	560
3.000	4,3	500
2.000	3,5	450
1.000	3,6	315
900	3,5	300
800	3,1	300
700	3,1	280
600	2,7	280
500	2,8	250

4.4 Examples of industrial installations


An installation with warm air blowing into two or more spaces *must* provide for the used air to return to the heater.

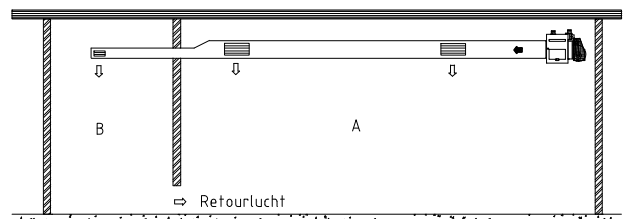

A heater that is installed in a separate space with ducts connected to a the adjacent room.

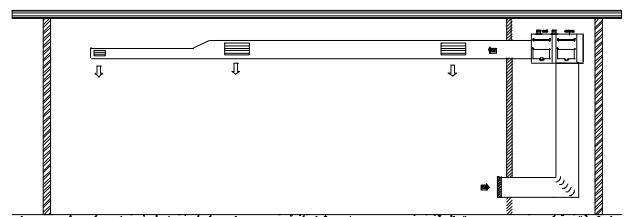

A heater with fresh air supply and return connection. The fresh air to indoor air ratio can be linked and adjusted by hand or by means of a stepped control and servo motor. The return and/or outside air can be potentially filtered.

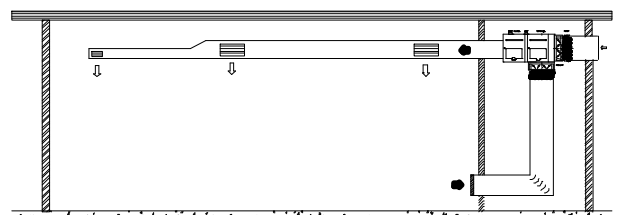

5 Electrical Connection

5.1 General

The installation must comply with the local and/or national regulations.

Ensure that it is connected to the correct consumer group protected by a MCB / RCD or main fuse.

The wiring diagram for the appliance can be found at the end this manual (chapter 7).

Isolating switch or plug

The appliance must be equipped with a 230-400 Volt isolating switch which interrupts the phase(s) and the neutral (but not the earth connection). This isolating switch must have a contact gap of at least 3 millimeters.

If the appliance is provided with a plug for use in a wall socket, the wall socket must be within reach at all times. NEVER interrupt the power supply to the appliance with other switches. This could lead to overheating of the appliance.

5.2 230Vac Version

The supply is 230Vac. (50Hz) with earth connection.

230V Version with ventilator motor and **external thermal safety device**.

This appliance employs Electrical diagram 7.1. The thermal safety feature in the current supply to the motor will trip when this motor is under excess load and the entire appliance will cease operation including burner and ventilator. The control of the appliance will also cease to operate and the thermostat control will not show a display. When the thermal fuse has cooled down the thermostat can be switched on again and the current will start the controls.

5.3 3-Phase 400Vac Version

The supply is 3 x 400Vac (50Hz) with Neutral and Earth

Neutral is also required for the smooth running of the appliance controls.

After connecting the appliance, the direction of rotation of the ventilator must first be checked. If this is incorrect, the 2 phases must be changed round in the supply to the appliance.

The ventilator has a thermal safety device in the current supply to the motor.

This appliance employs Electrical diagram 7.2. The thermal fuse in the current supply to the motor will trip when the motor is under overload and the entire appliance will cease operation including the burner and ventilator. The control of the appliance will also stop and the thermostat will not show a display. When the thermal fuse has cooled down, the power can be switched back on again and the unit will start.

The TR heaters with a centrifugal ventilator from 2,2 kW motor power capacity is standard provided with a soft starter (Electrical diagram 7.3). For versions with the centrifugal motor power capacity smaller than 2,2 kW the soft starter is optional.

6 Adjusting the ventilator

In order to prevent overload of the electric motor, the ventilator has been set to a certain speed in the factory that is correct for the static pressure to be delivered by the appliance. This pressure is printed on the type plate.

A feature of these ventilators is that increased air displacement also demands more amps to the motor.

If the resistance of the air in the system is in practice lower than the static pressure setting of the air heater, the displacement of air in the ventilator will increase. This could lead to overload of the ventilator motor and hence to the appliance tripping out. Check the amperage of the ventilator motor. This needs to be lower than the maximum amperage printed on the type plate of the electric motor and/or the Technical Data.


Always check the direction of rotation of 3-phase motors!

6.1 Excess amperage, too much air displacement

When the amperage is too high the ventilator speed must be reduced or the static pressure must be increased.

The speed of the motor is not adjustable in three-phase current. In that case resistance in the ducting system should be increased by means of a choke or a reducing valve, which in turn will displace less air and reduce the amperage. Refer to the table with Technical Data.

Reducing the revolutions can only be done by changing the pulley and V-belts. Also check this with an amp meter and an air reading if possible.

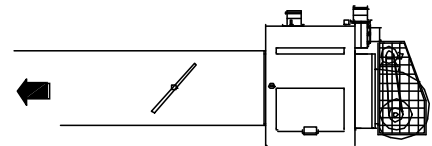

The air speed will increase proportionally when ducts have to be used that are narrower than shown in the table. The resistance will increase by the root mean square.

For example: Speed 1.2 x higher
 Resistance $1.2 \times 1.2 = 1.44$ higher

Important!


If an air heater is intended to be connected to a duct system with a high static pressure this must not under any circumstances be implemented with unrestricted air diffusion without taking further measures. This will inevitably lead to the electric motor cutting out.

Refer to the Technical data for the maximum air displacement, the static air capacity and the maximum amperage of the ventilator motor.

6.2 Insufficient air displacement

The appliance will not displace a sufficient amount of air when the resistance in the system is too high. This is not a problem for the ventilator but the heat exchanger in the appliance can become too hot and will cut out because of overheating. In that case the resistance in the system must be reduced or the ventilator must run at higher revolution speeds. This can influence the choice of motor. Always contact the manufacturer in cases like these.


7.2 TR-A 100

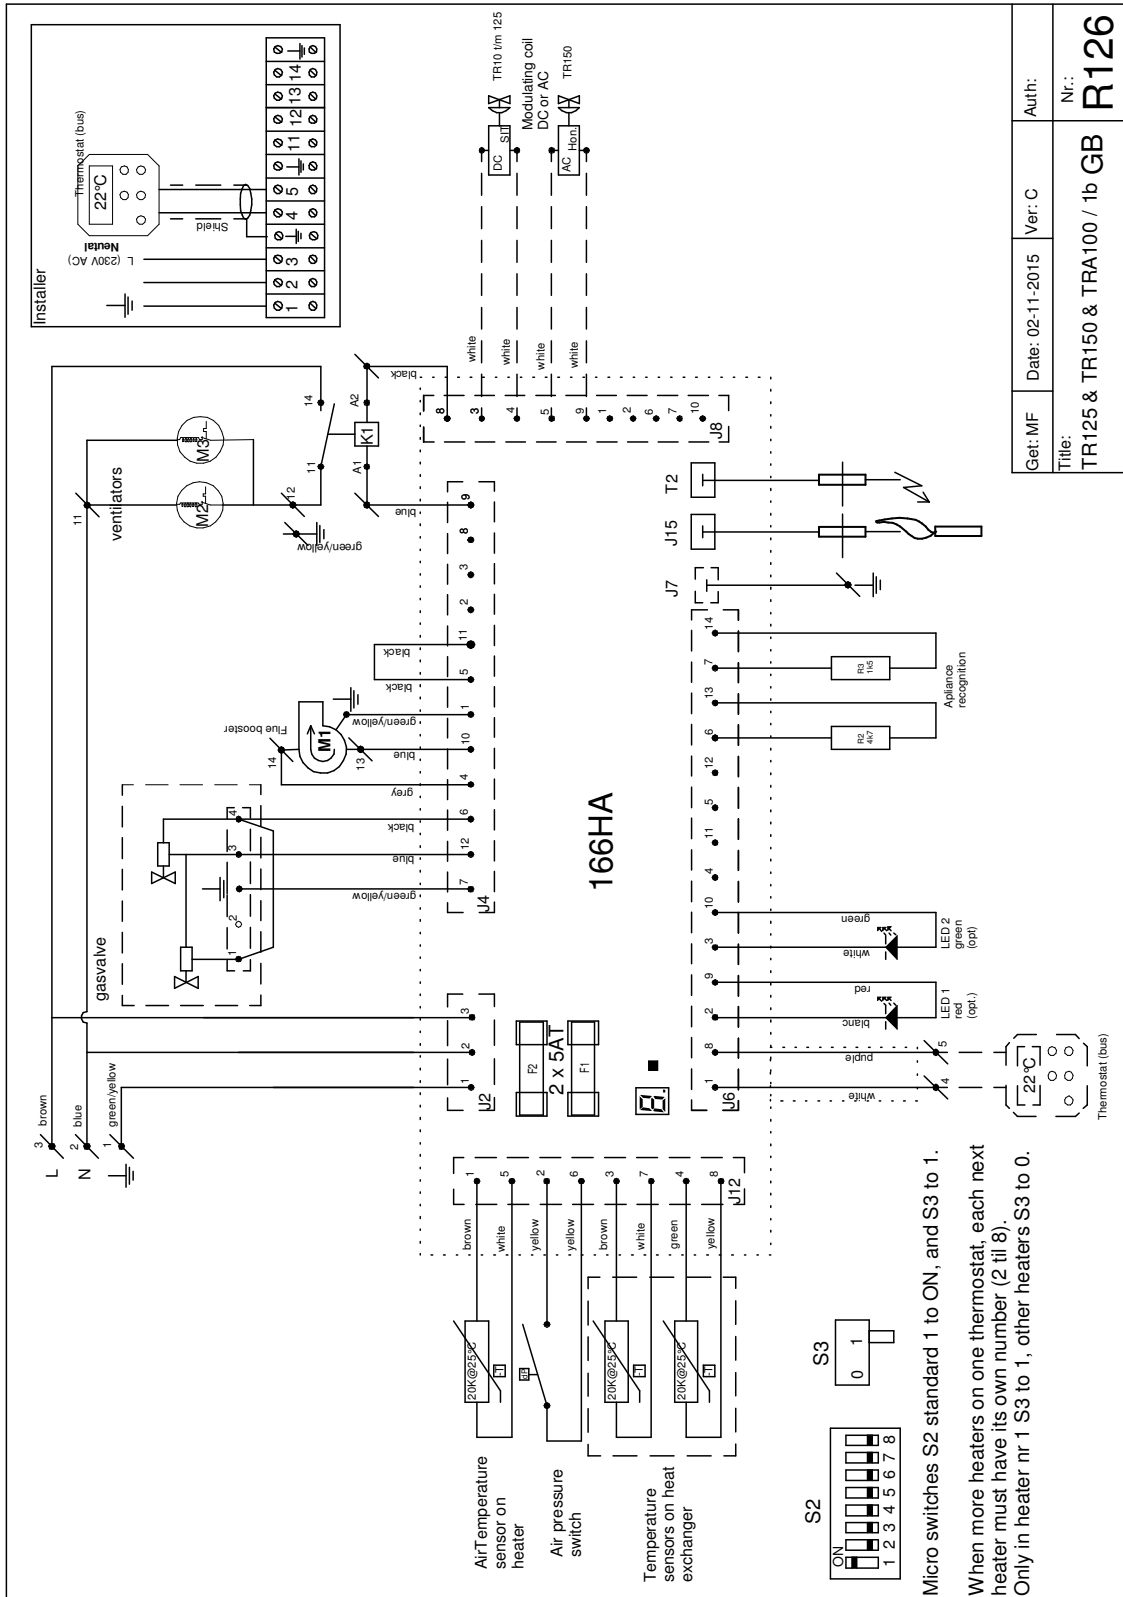

Micro switches S2 standard 1 to ON, and S3 to 1.
 When more heaters on one thermostat, each next heater must have its own number (2 til 8).
 Only in heater nr 1 S3 to 1, other heaters S3 to 0.

Get: MF	Date: 02-11-2015	Ver: C	Auth:
Title: TR125 & TR150 & TRA100 / 1b GB			Nr.: R126


7.3 230Vac version with external thermal safety device

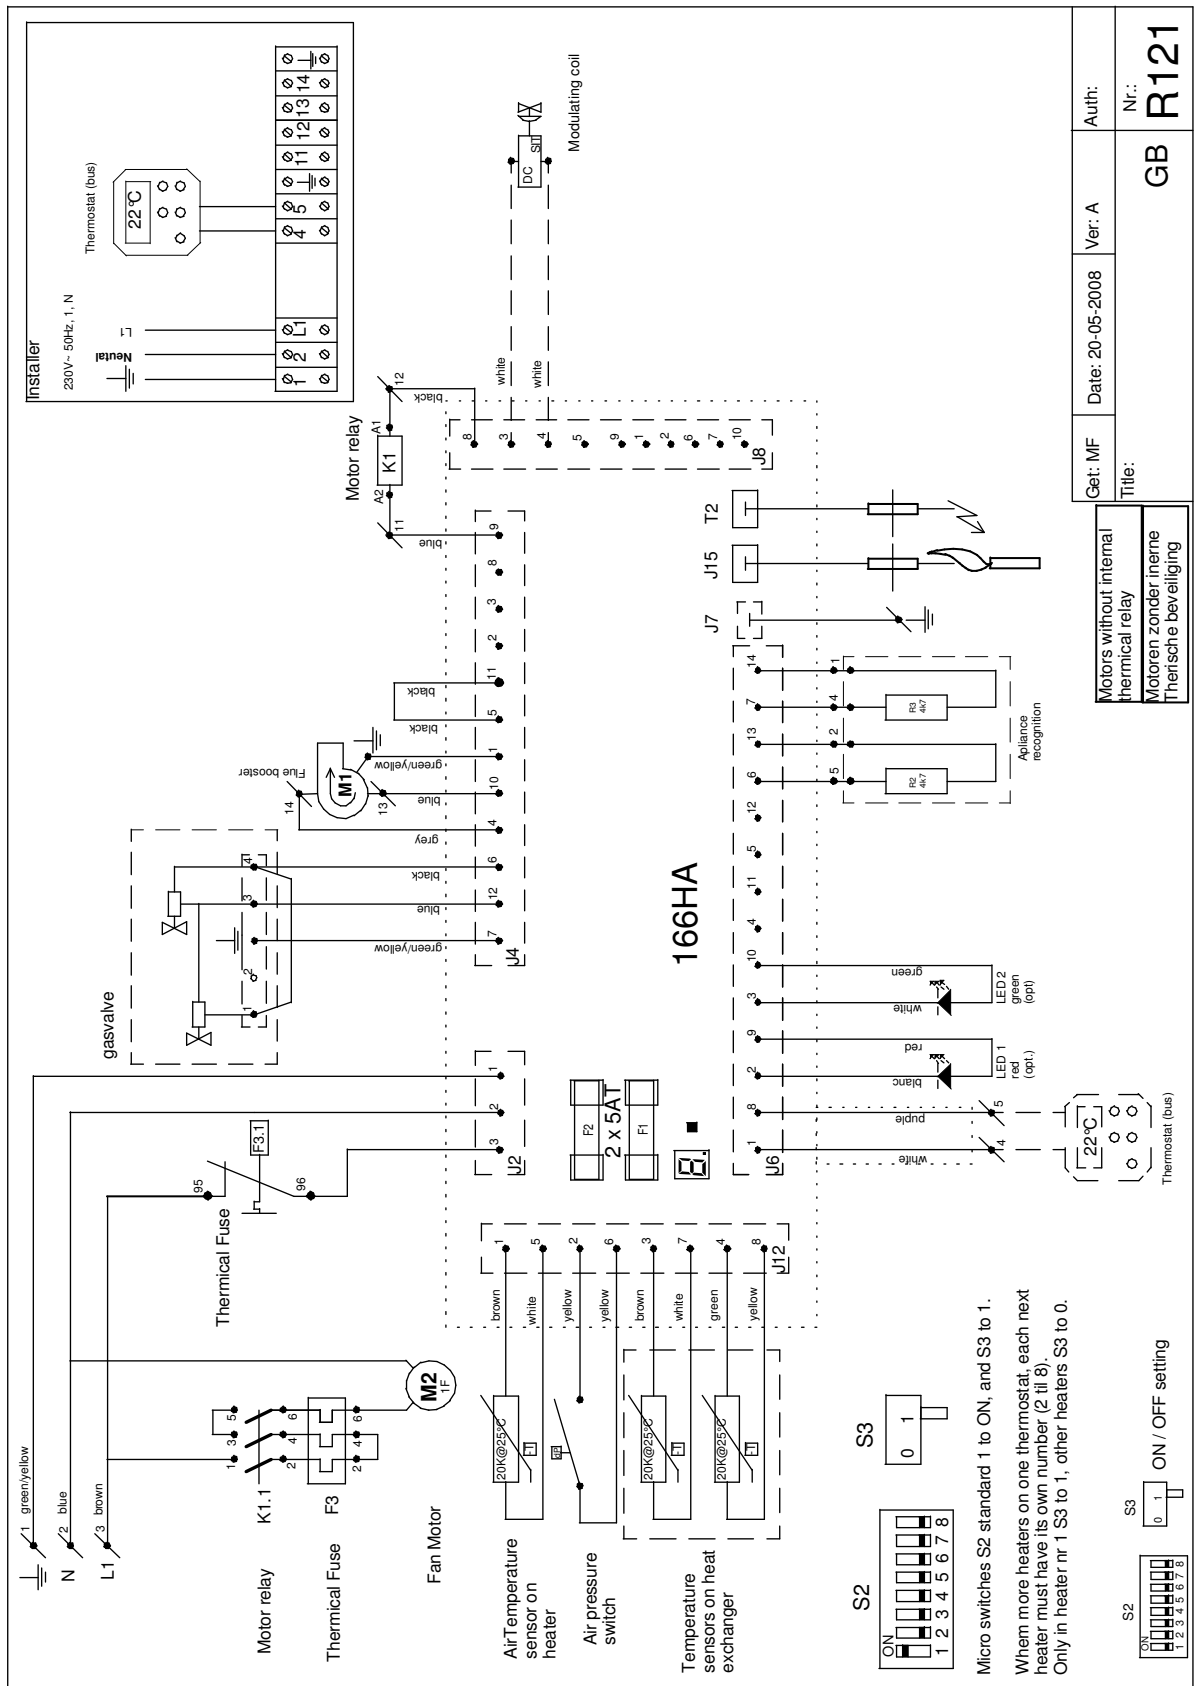


Micro switches S2 standard 1 to ON, and S3 to 1.
When more heaters on one thermostat, each next heater must have its own number (2 till 8).
Only in heater nr 1 S3 to 1, other heaters S3 to 0.

Get: MF	Date: 20-05-2008	Ver: A	Auth:
Title:			Nr.: R121
Motors without internal thermal relay Motoren zonder interne Thermische beveiliging			GB

7.4 3-Phase 400Vac Version

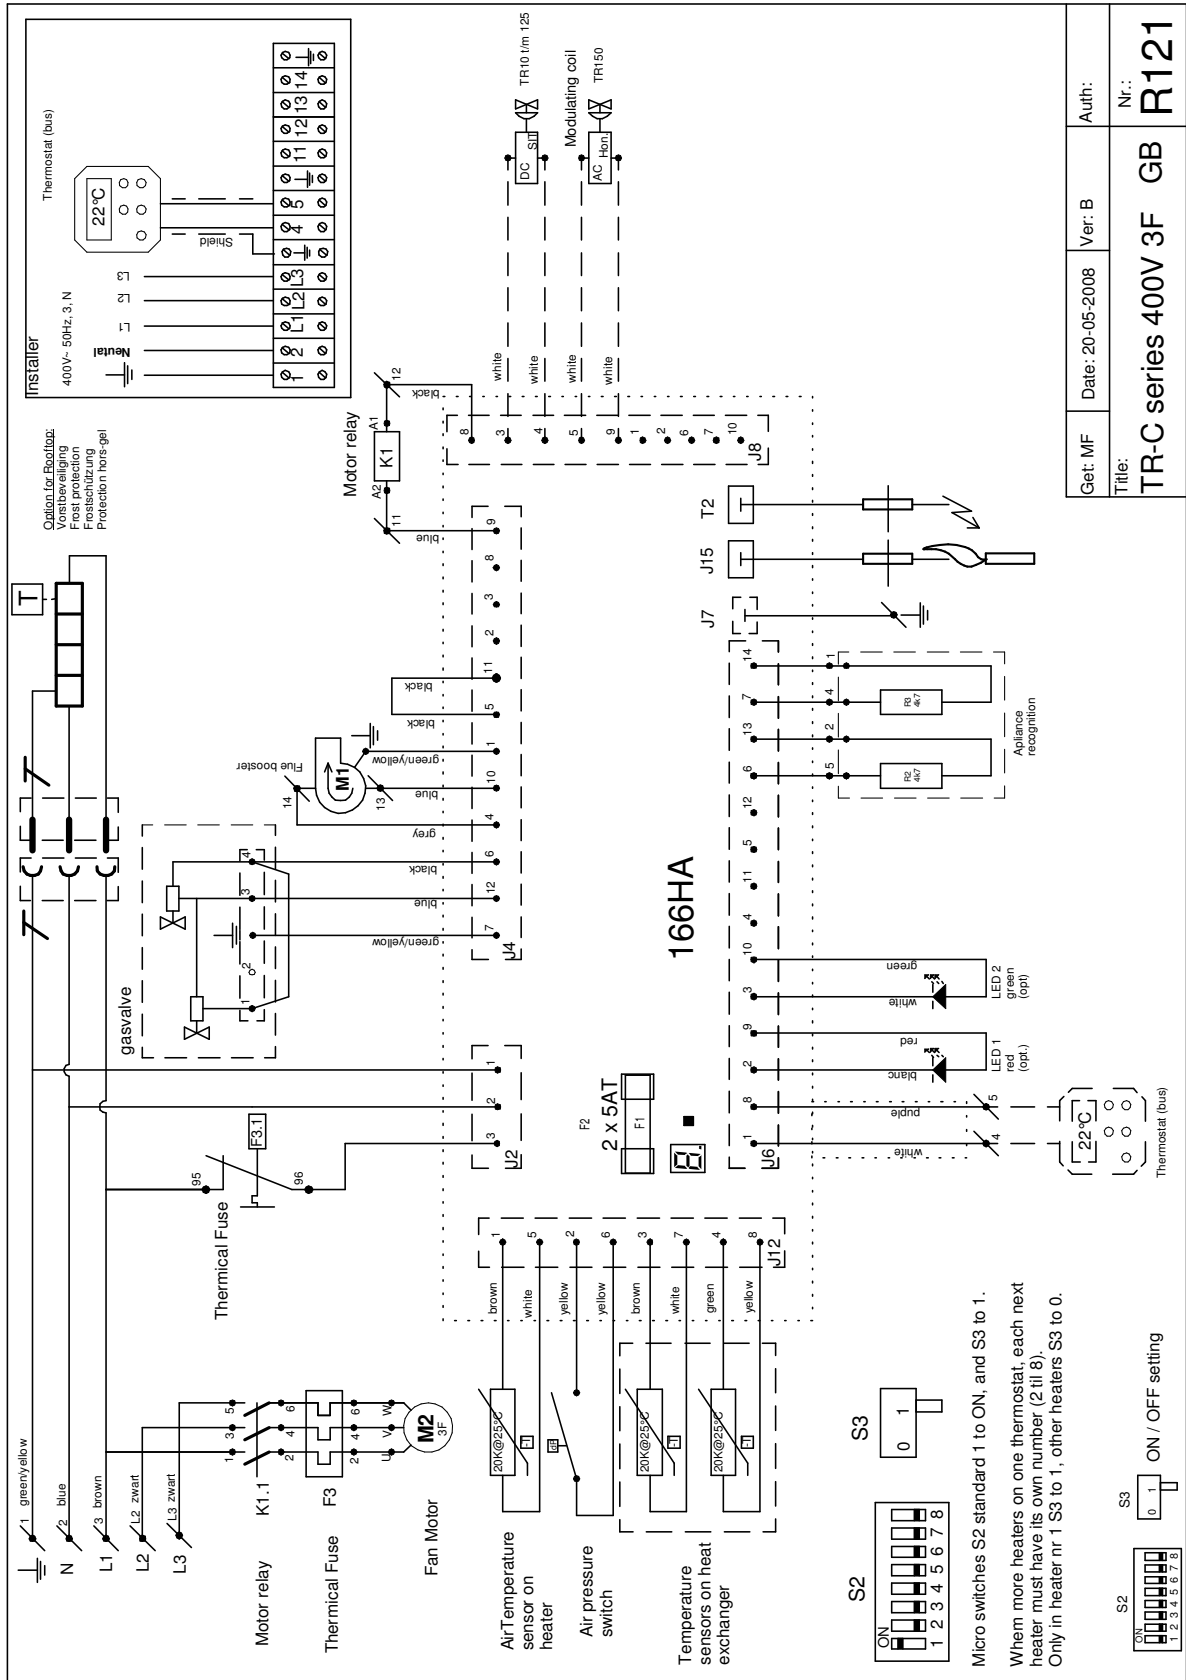


7.5 3-Phase 400Vac Version with soft starter

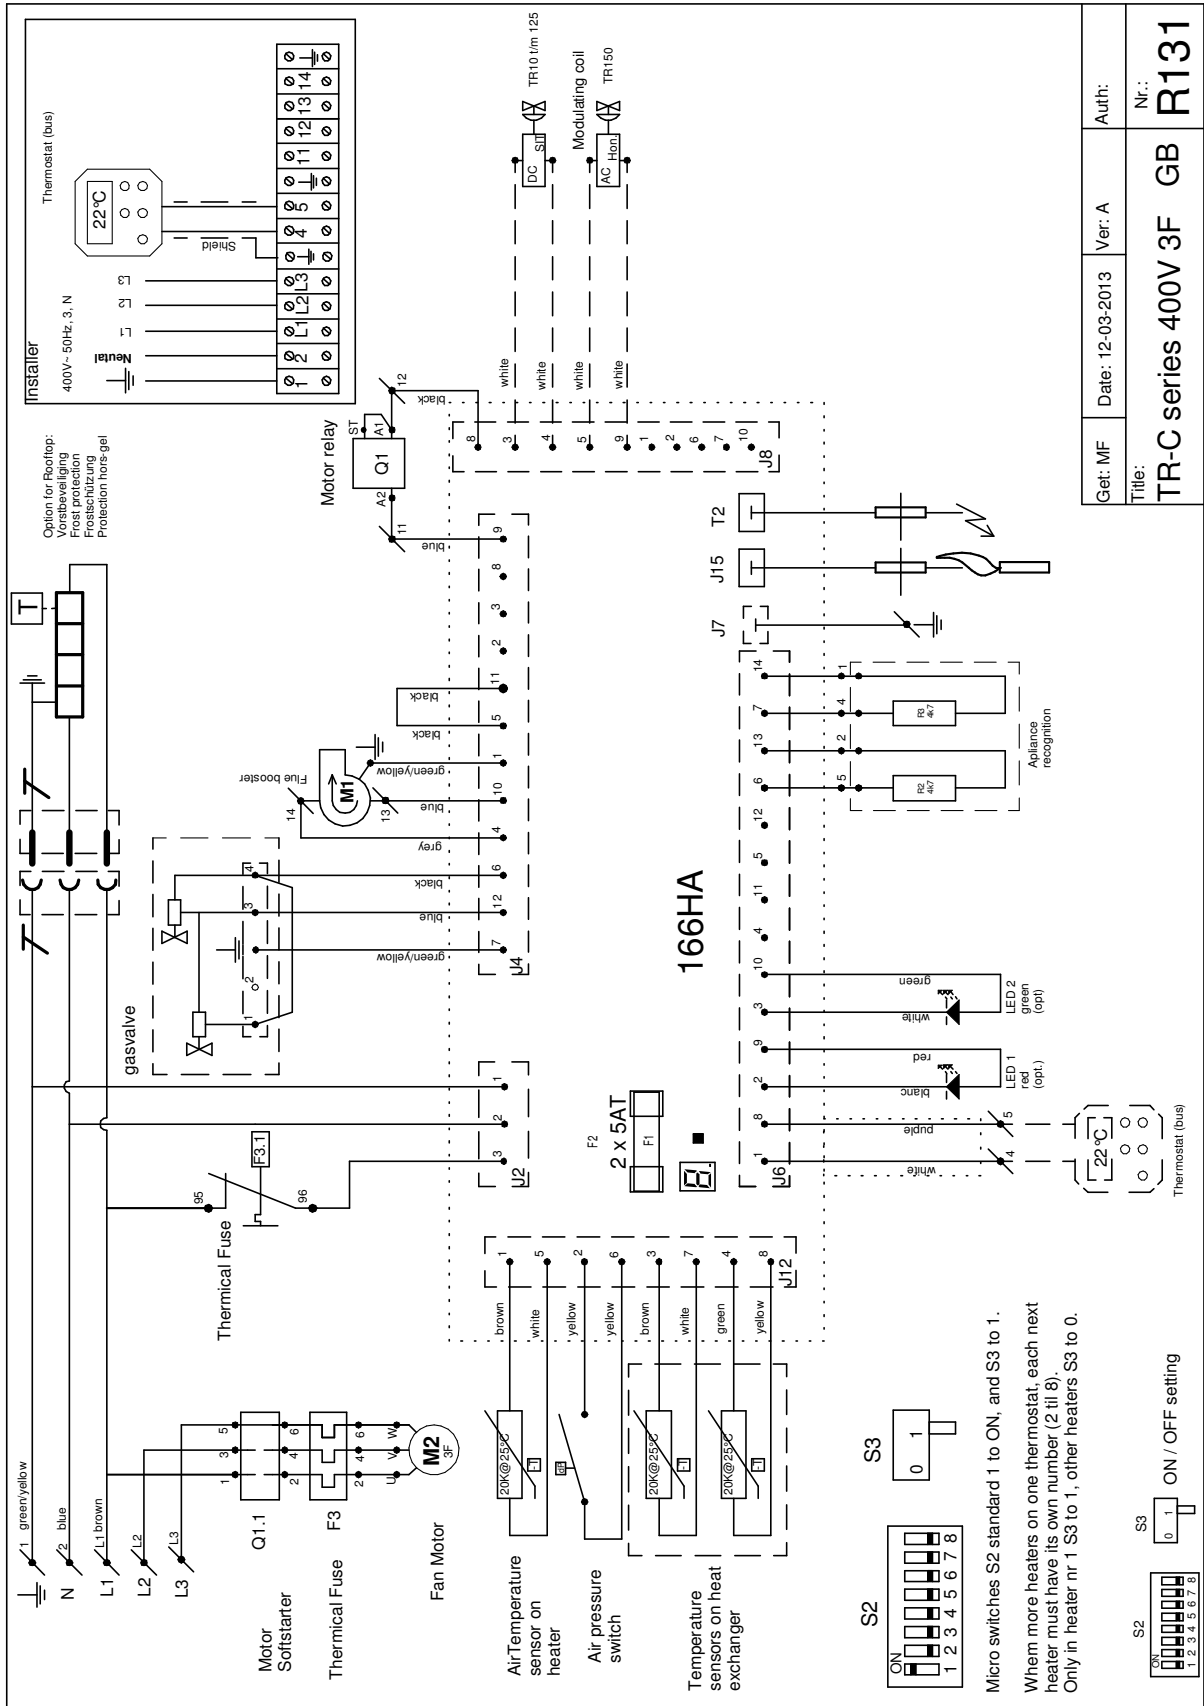


8 Dimensions

8.1 TR24 - 50 Centrifugal / Rooftop


8.1.1 TR24 C - 50 C Basic

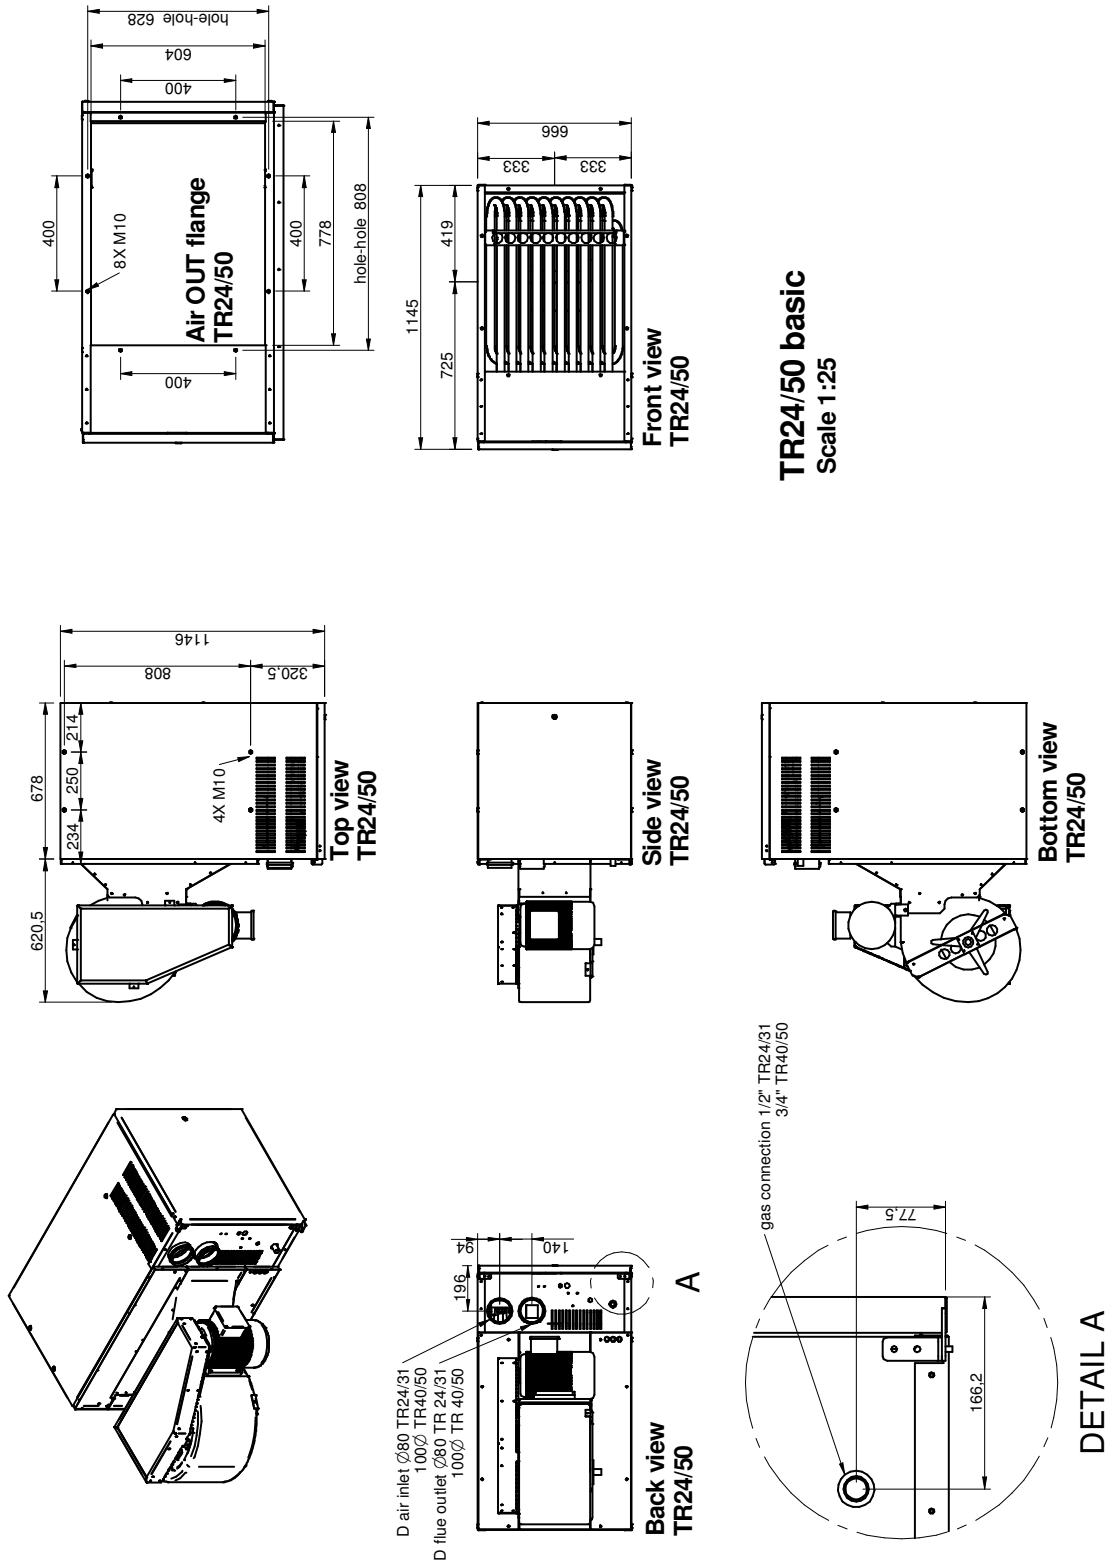


8.1.2 TR24 - 50 A / C Fanbox

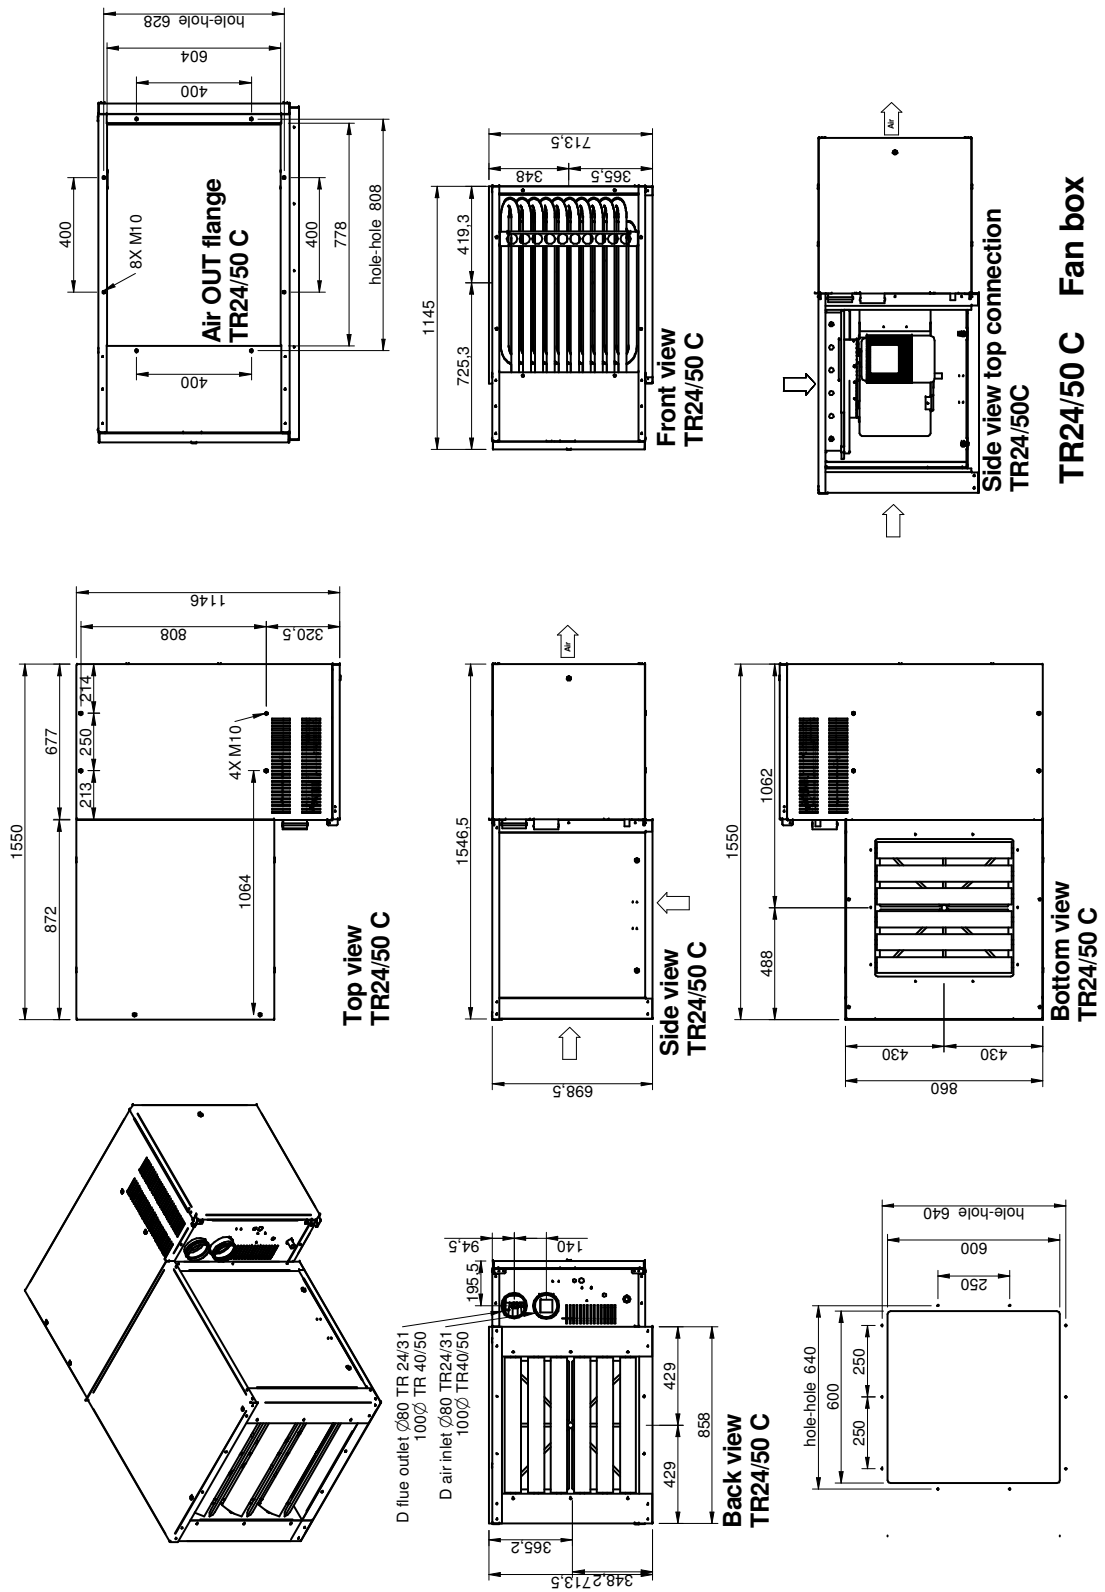

8.1.3 TR24 R & TR28 R Rooftop

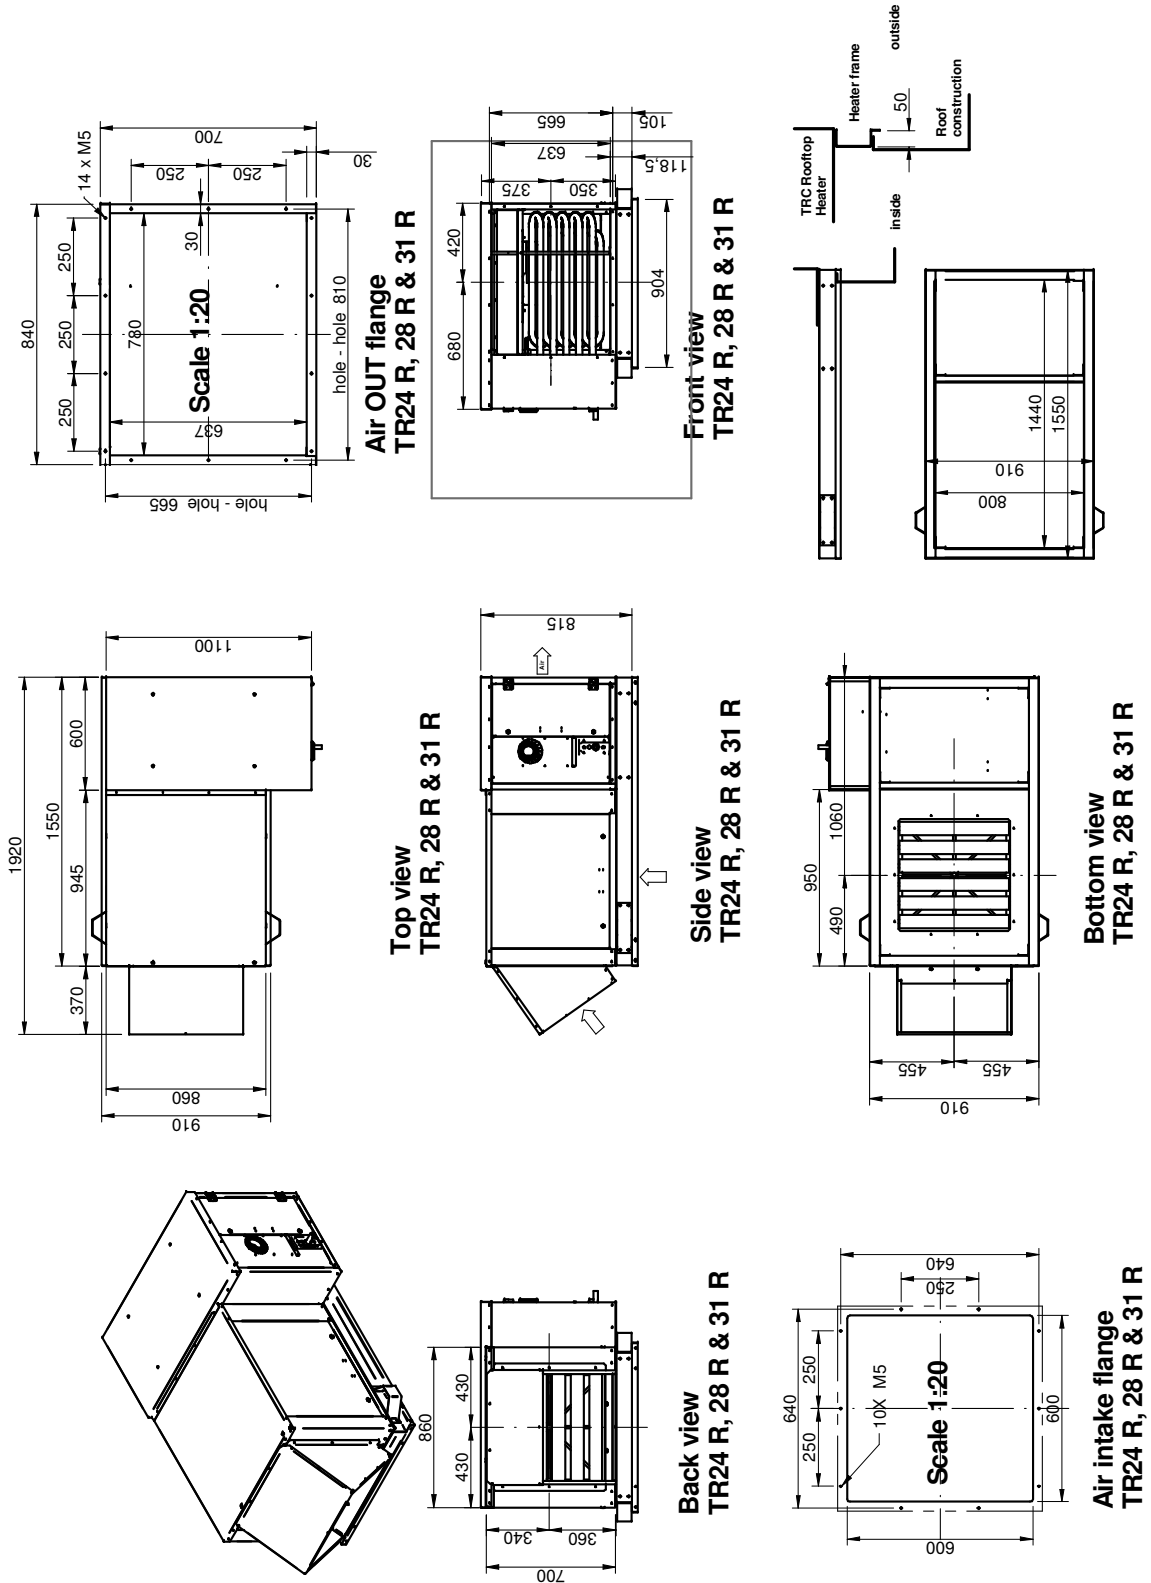


8.1.4 TR40 & 50 R Rooftop

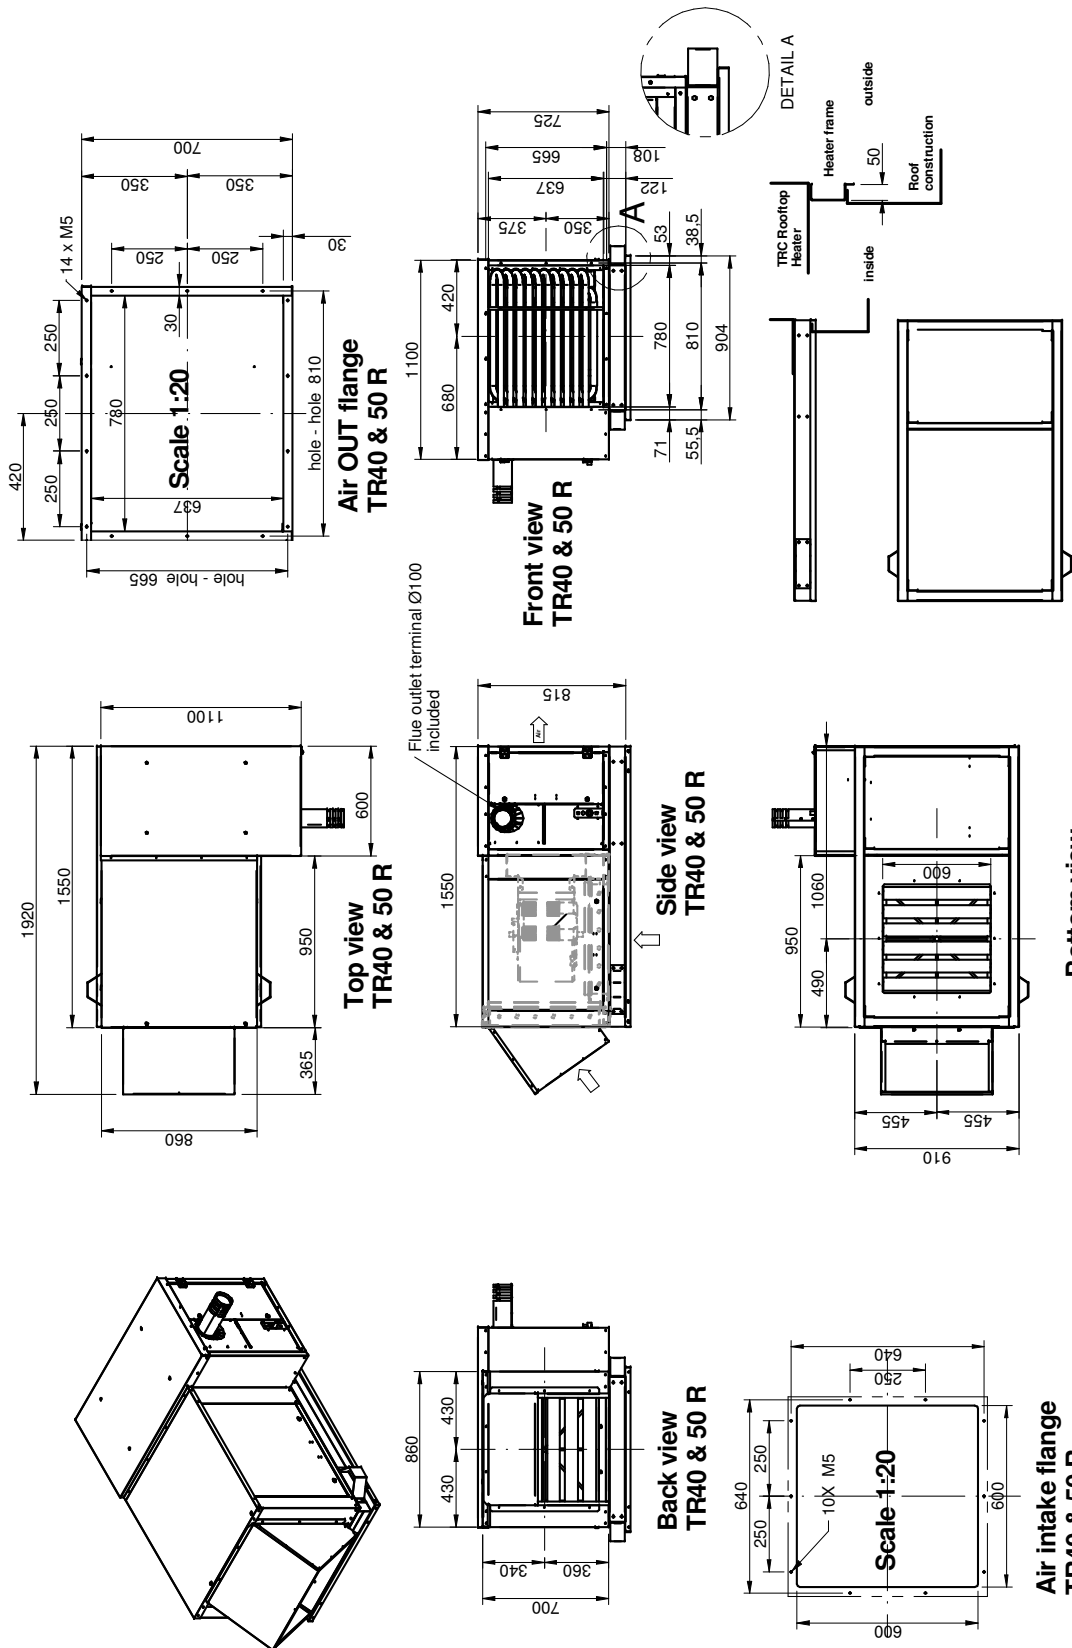


TR40 & 50 R Rooftop.
 Scale 1:33

8.2 TR60 - 100 Centrifugal / Rooftop


8.2.1 TR60 C - 100 C Basic

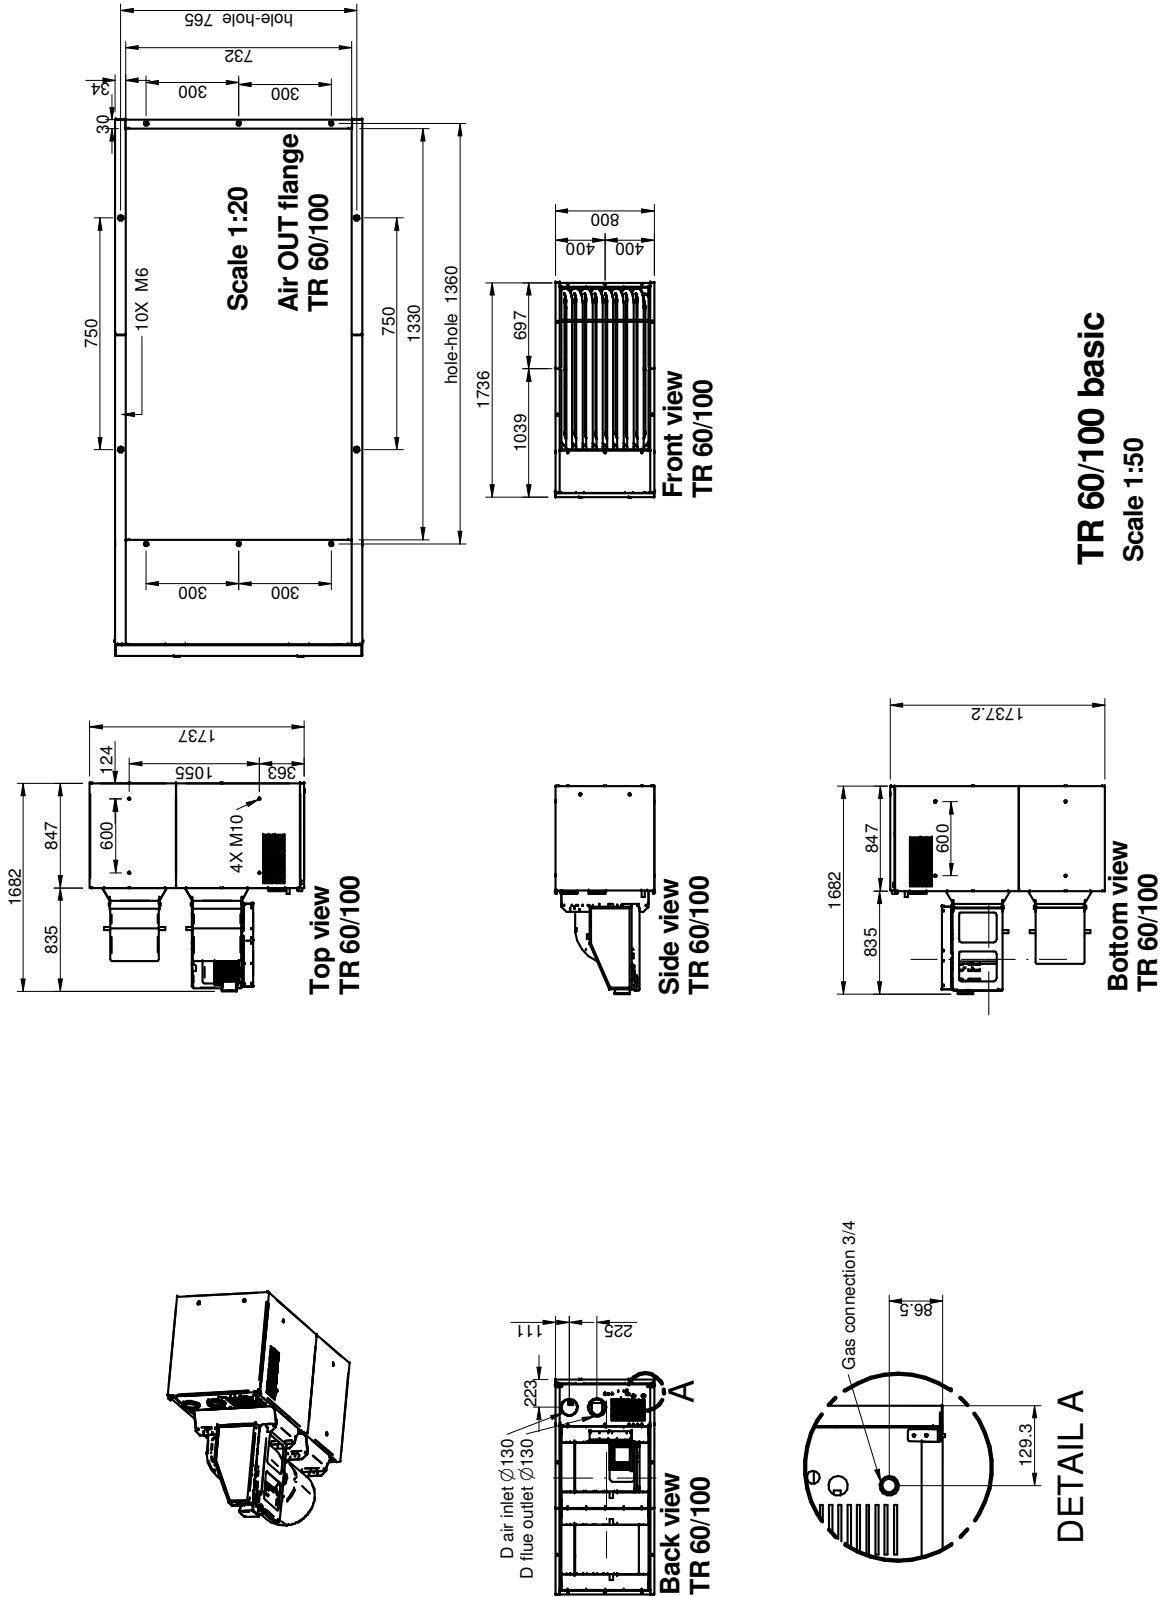


8.2.2 TR60 - 100 A/C Fan box

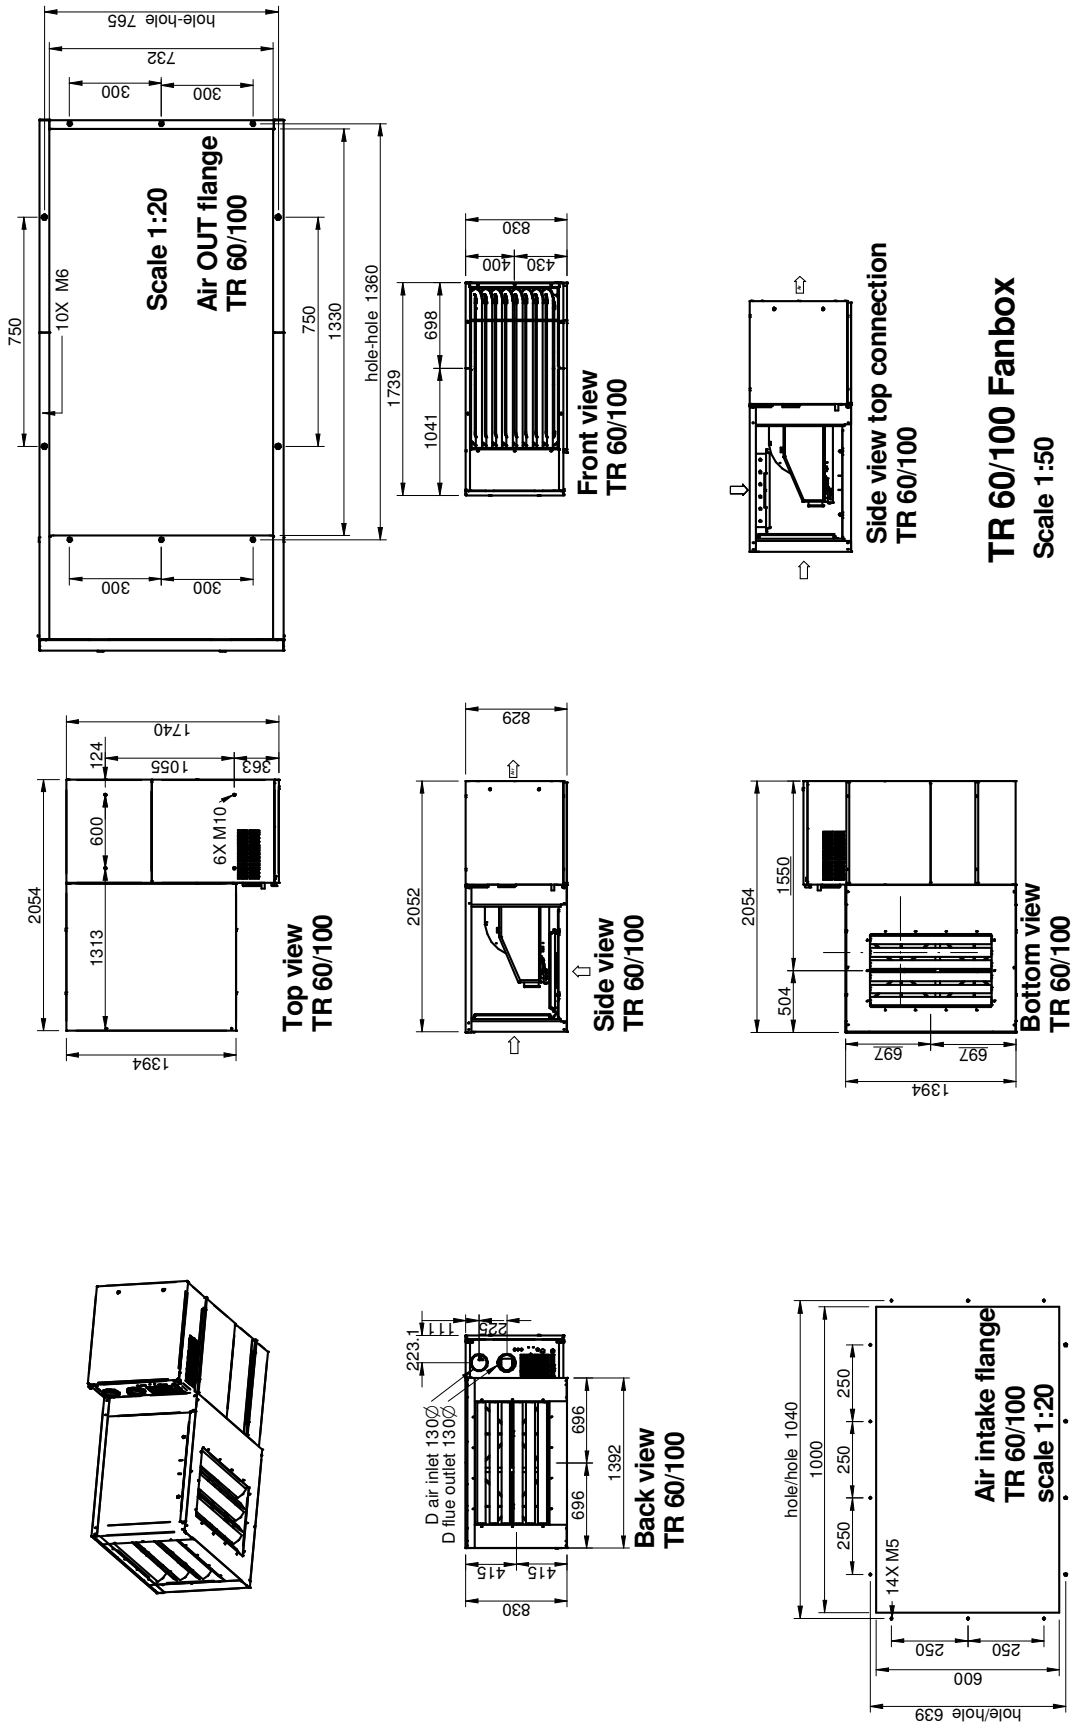


8.2.3 TR60 R & 80 R Rooftop

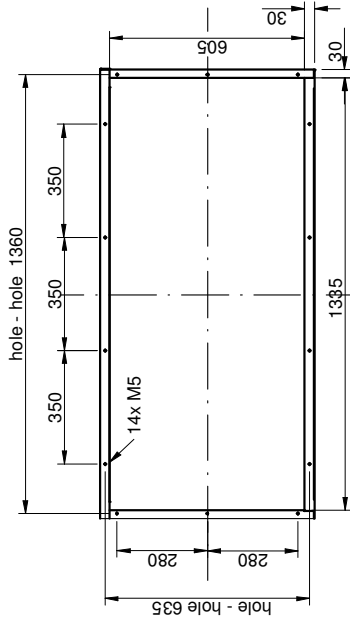


**Air OUT flange
TR60 R & 80 R**

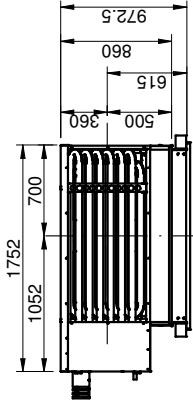


**Front view
TR60 R & 80 R**

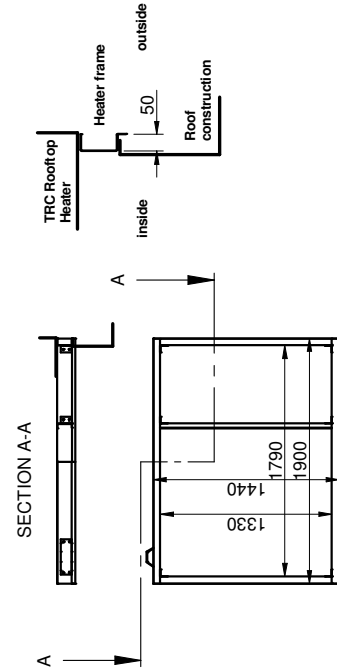


**TR60 R & 80 R Rooftop
Scale 1:50**

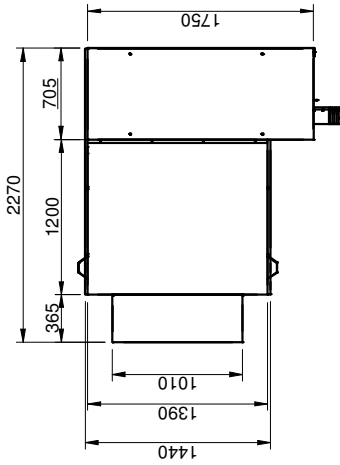



**Top view
TR60 R & 80 R**

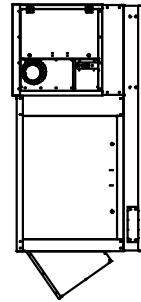


**Side view
TR60 R & 80 R**

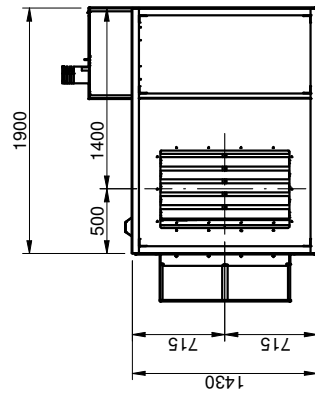

**Bottom view
TR60 R & 80 R**

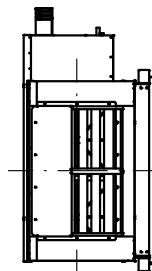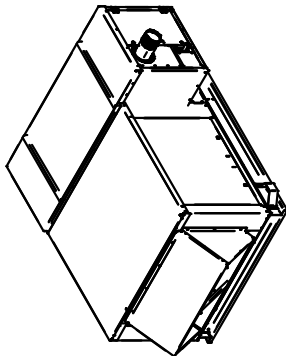


**Back view
TR60 R & 80 R**

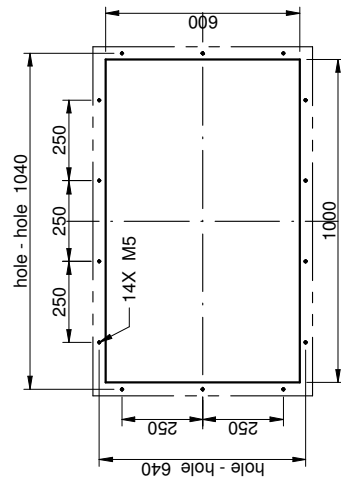



**Air intake flange
TR60 R & 80 R**

8.2.4 TR100 R Rooftop





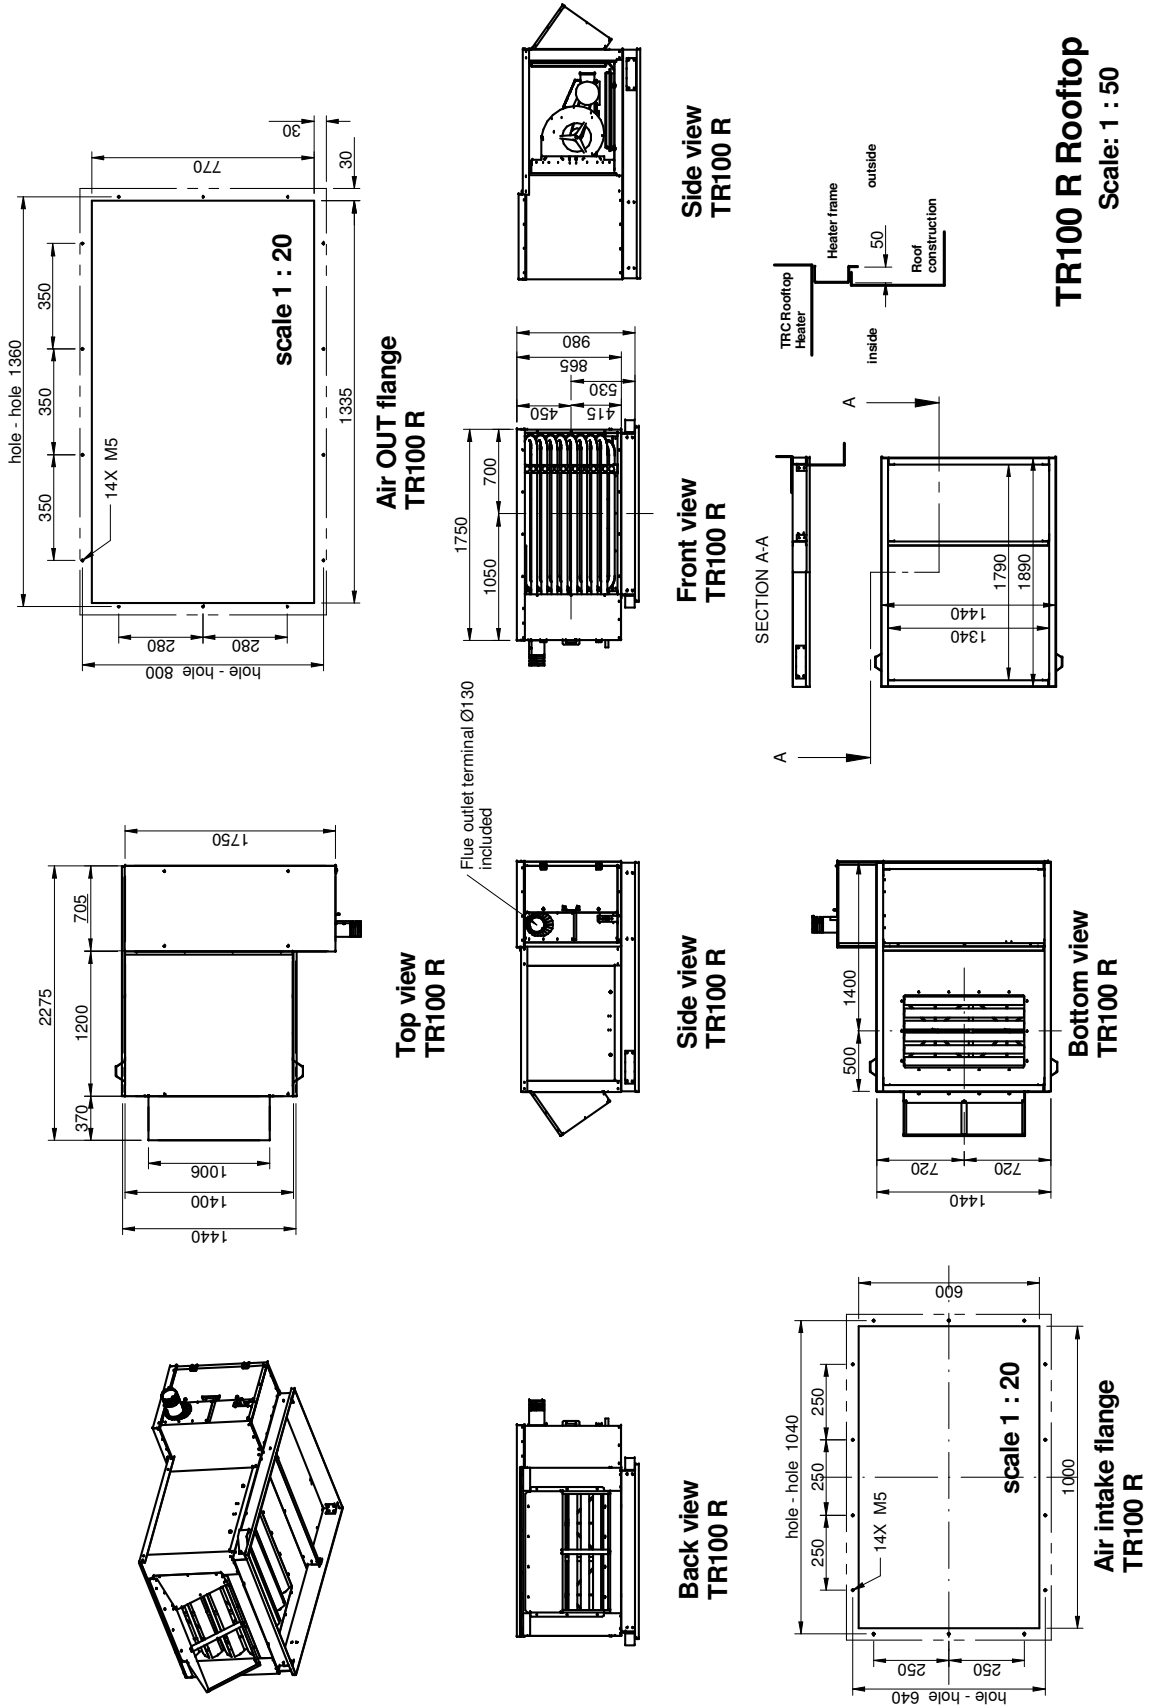


8.3 TR125 Centrifugal / Rooftop


8.3.1 TR125 & 150 C Basic

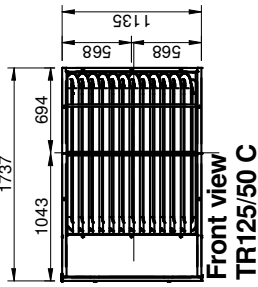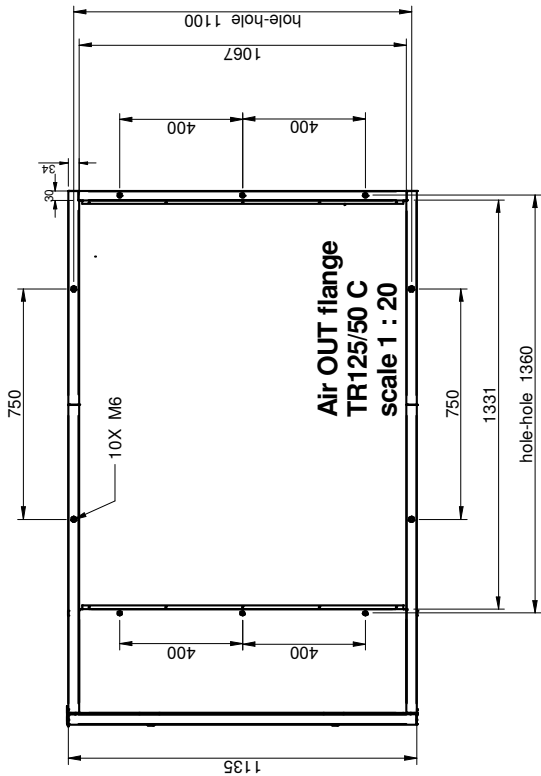


**TR125/50 C basic
Centrifugal
Scale 1:50**

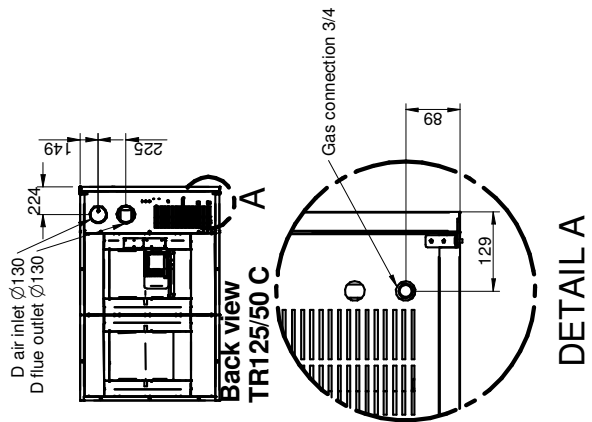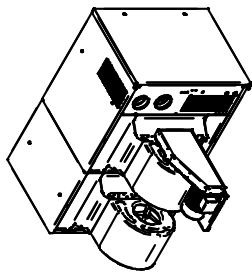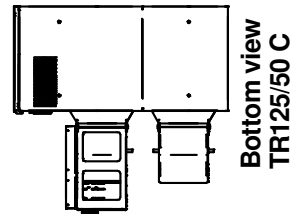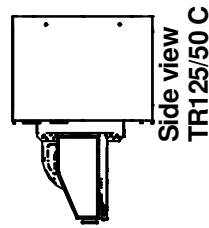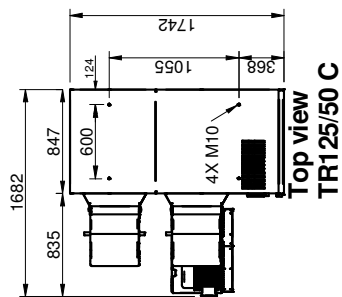


8.3.2 TR125 & 150 C Fanbox

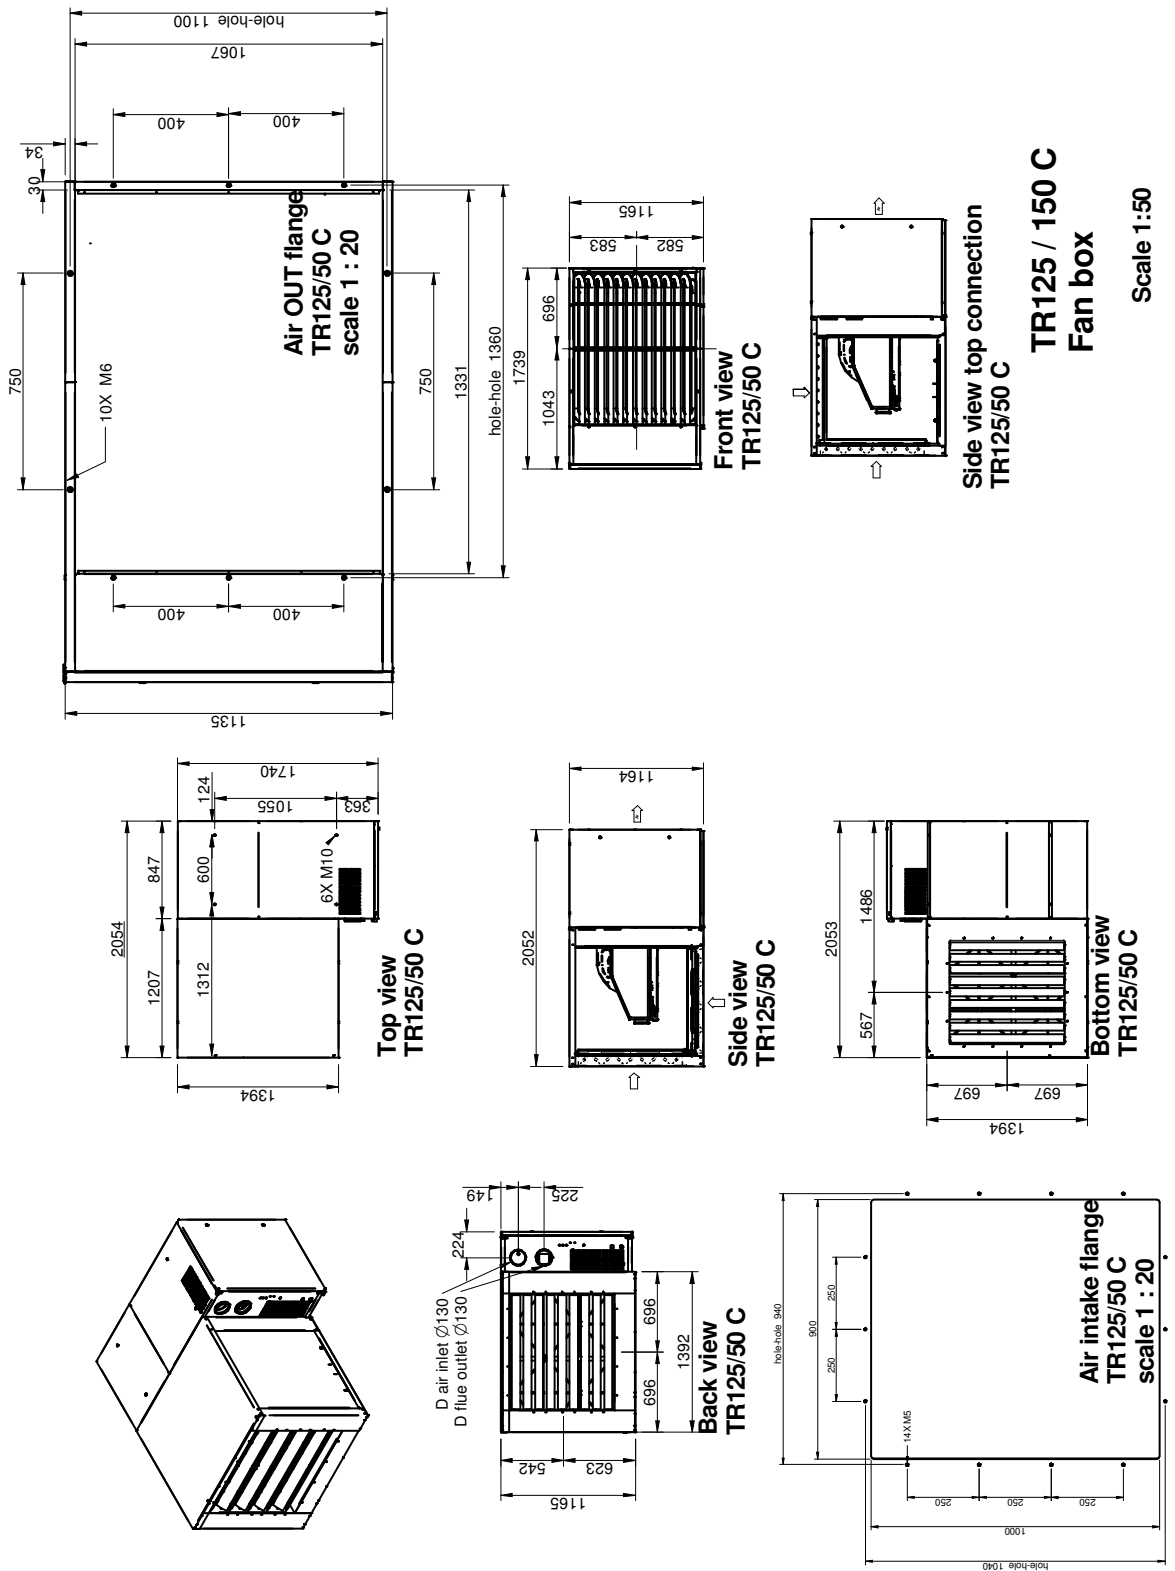


8.3.3 TR125 R Rooftop

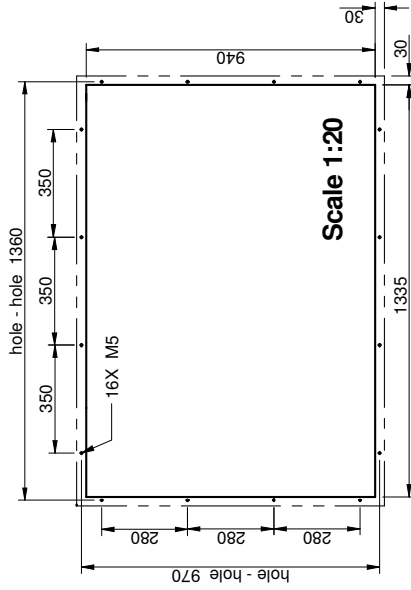


**Air OUT flange
TR125 R**

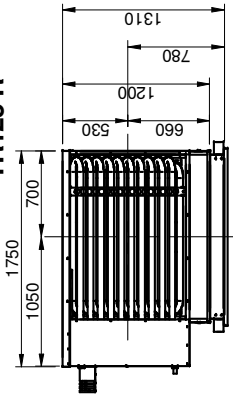


**Front view
TR125 R**

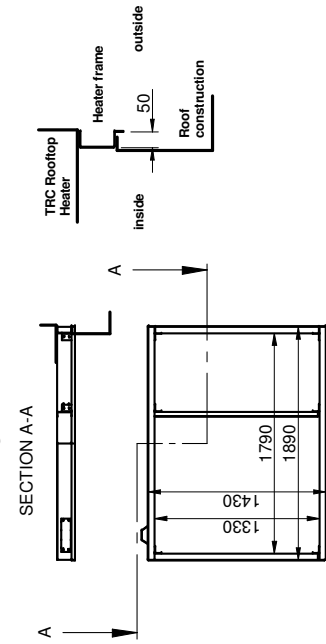


**TR125 R Rooftop
Scale 1:50**

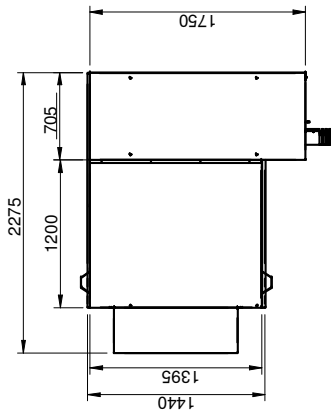


**Top view
TR125 R**

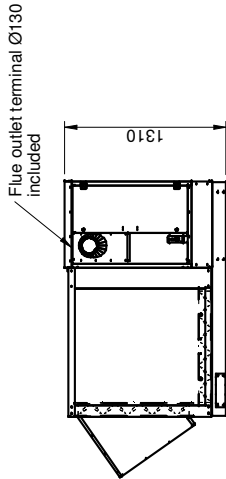


**Side view
TR125 R**

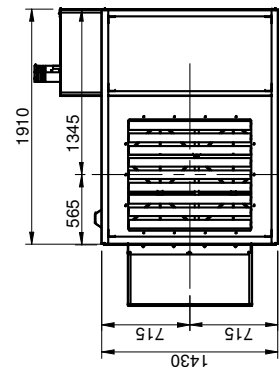

**Bottom view
TR125 R**

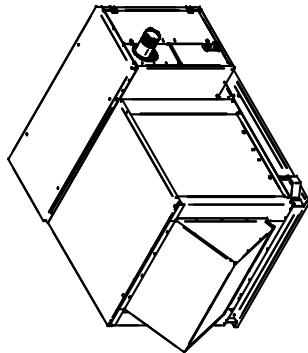


**Back view
TR125 R**

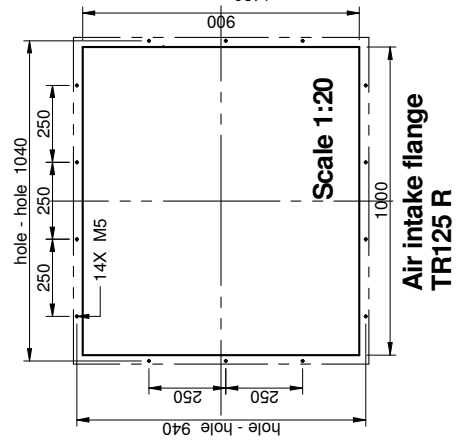

**Air intake flange
TR125 R**



8.3.4 TR150 R Rooftop

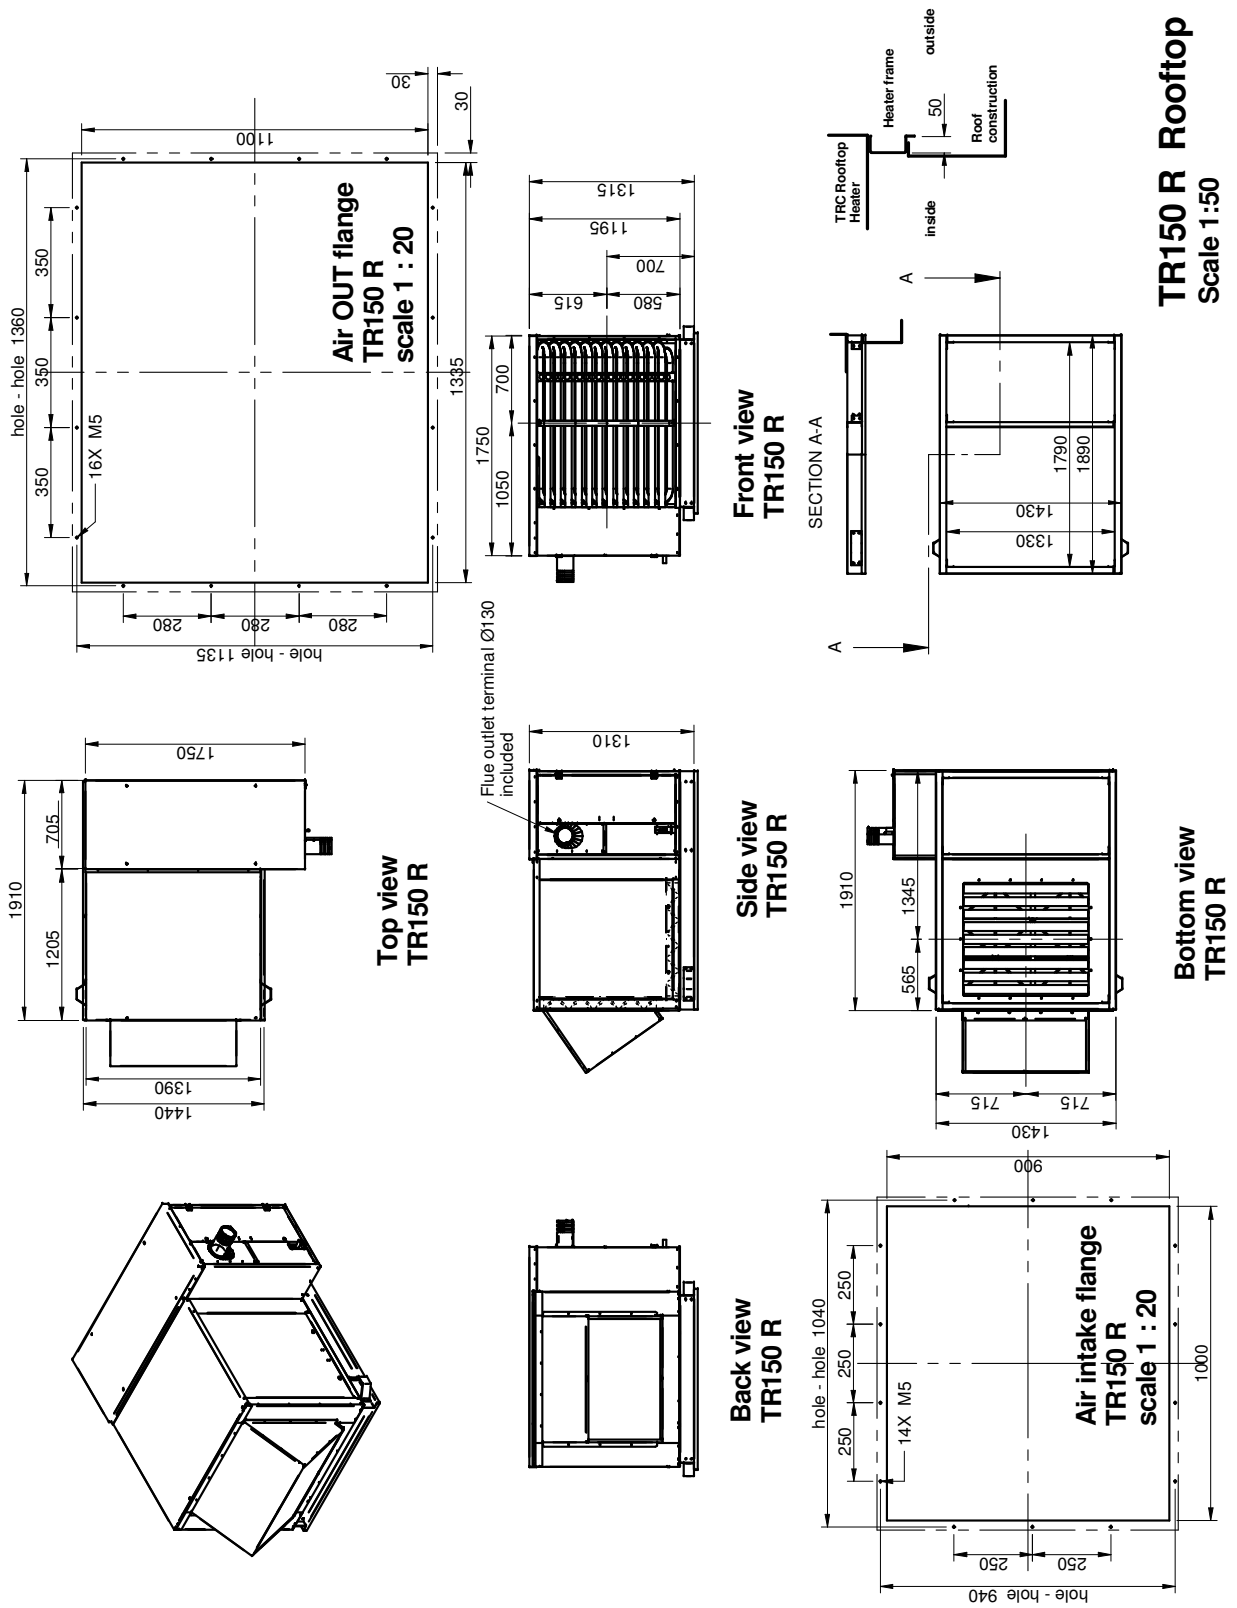

TR150 R Rooftop
 Scale 1:50


8.4 Construction frames

8.4.1 Rooftop Frame TR24 R – 50 R

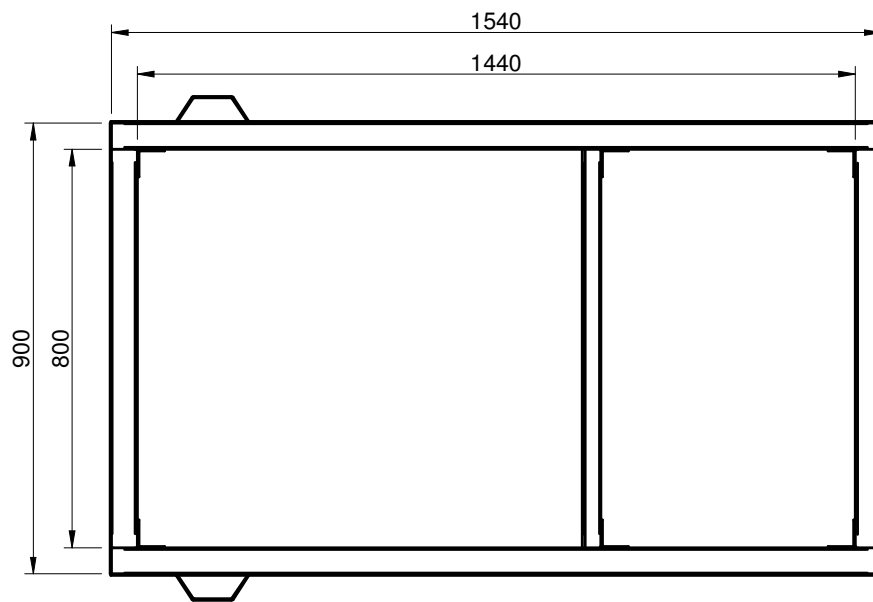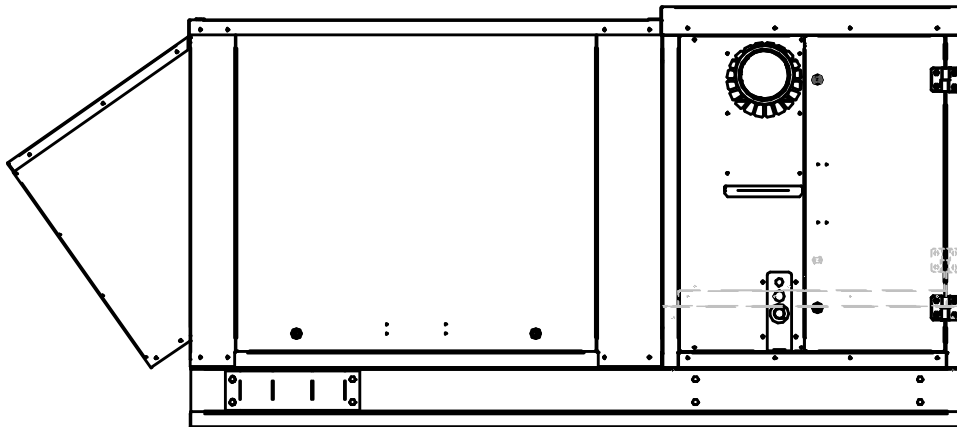


Rooftop Frame TR24-28-40-50 R

Scale: 1 : 20



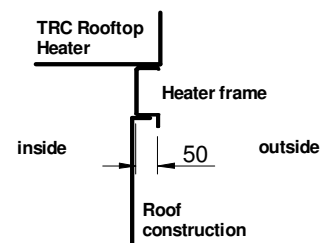


8.4.2 C Frame TR24 R – 50 C / R

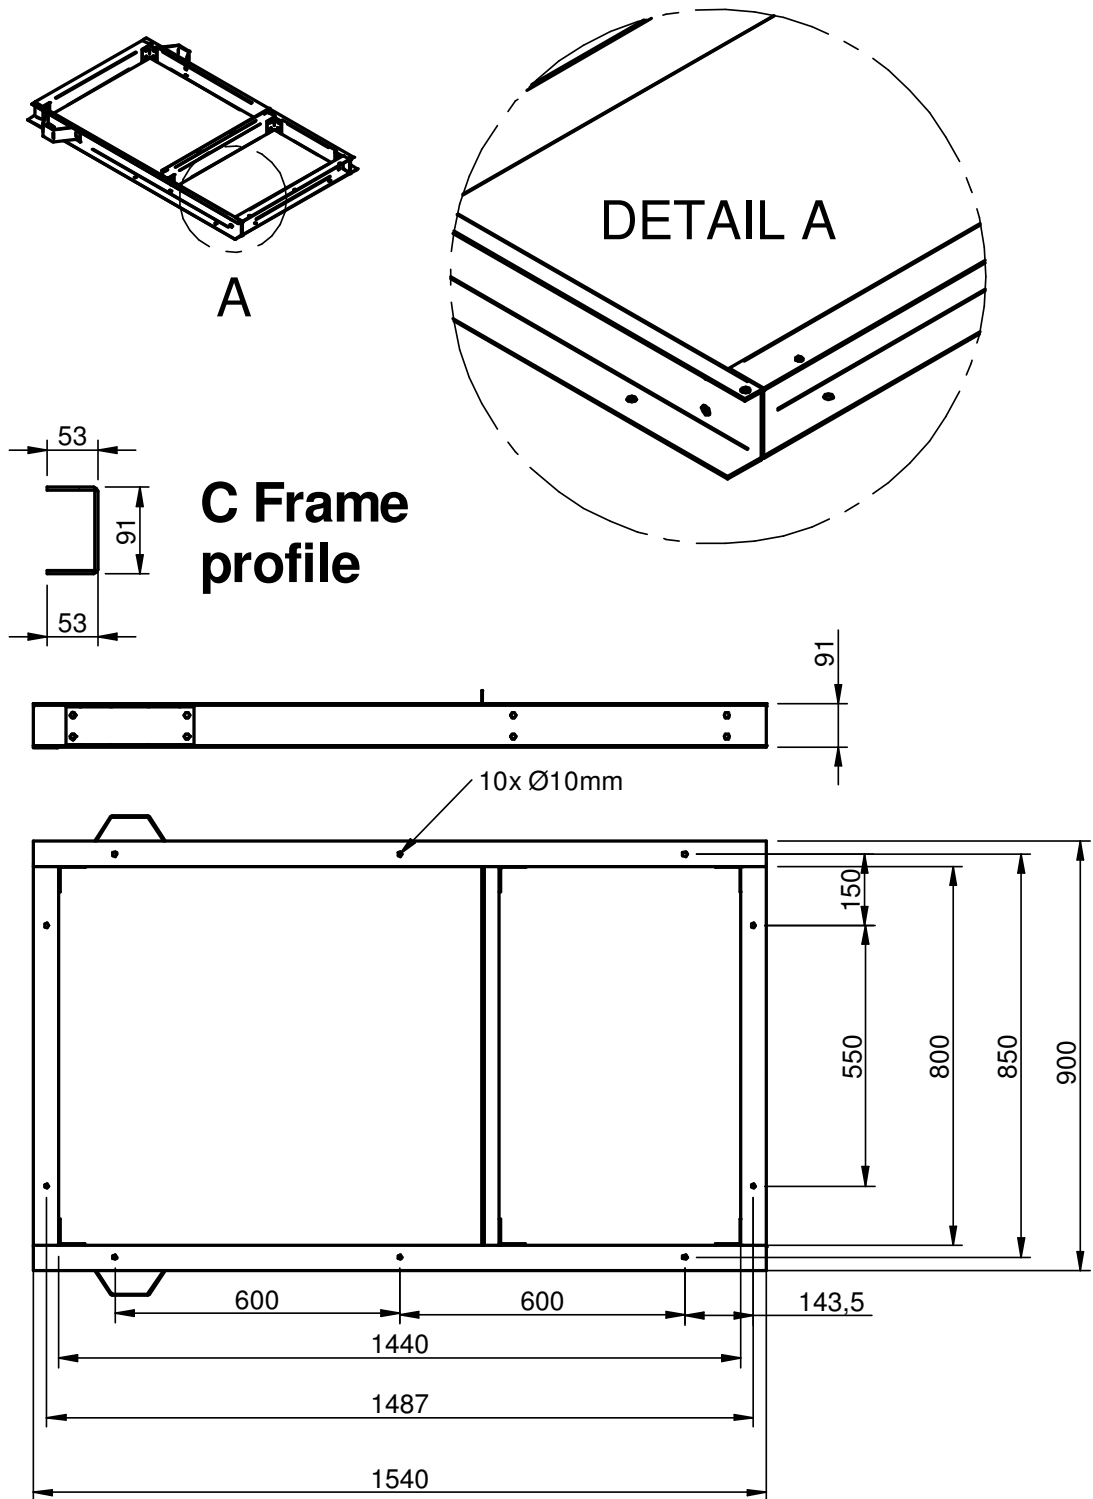

C Frame
TR24, 28, 40, 50 C / R
scale 1 : 20


8.4.3 Rooftop frame TR60 R-150 R

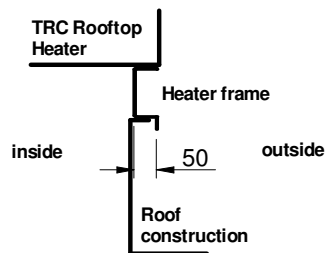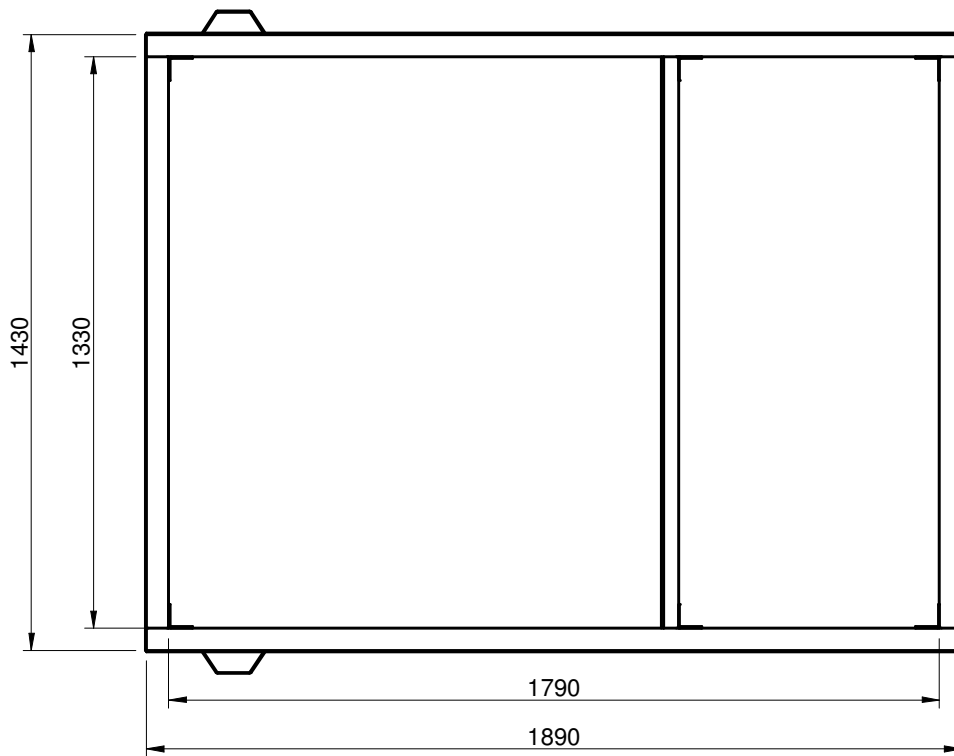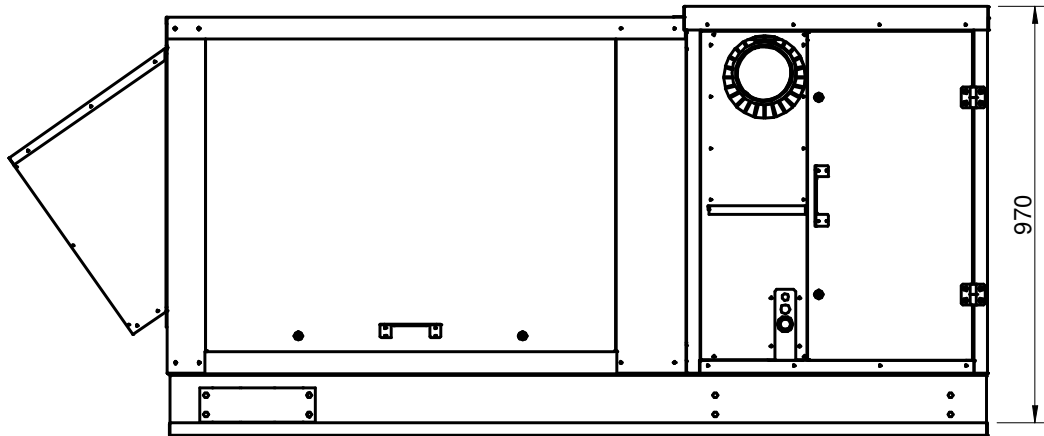

Rooftop Frame TR60 C - 150 C

scale: 1 : 20

8.4.4 C Frame TR60 -150 C / R

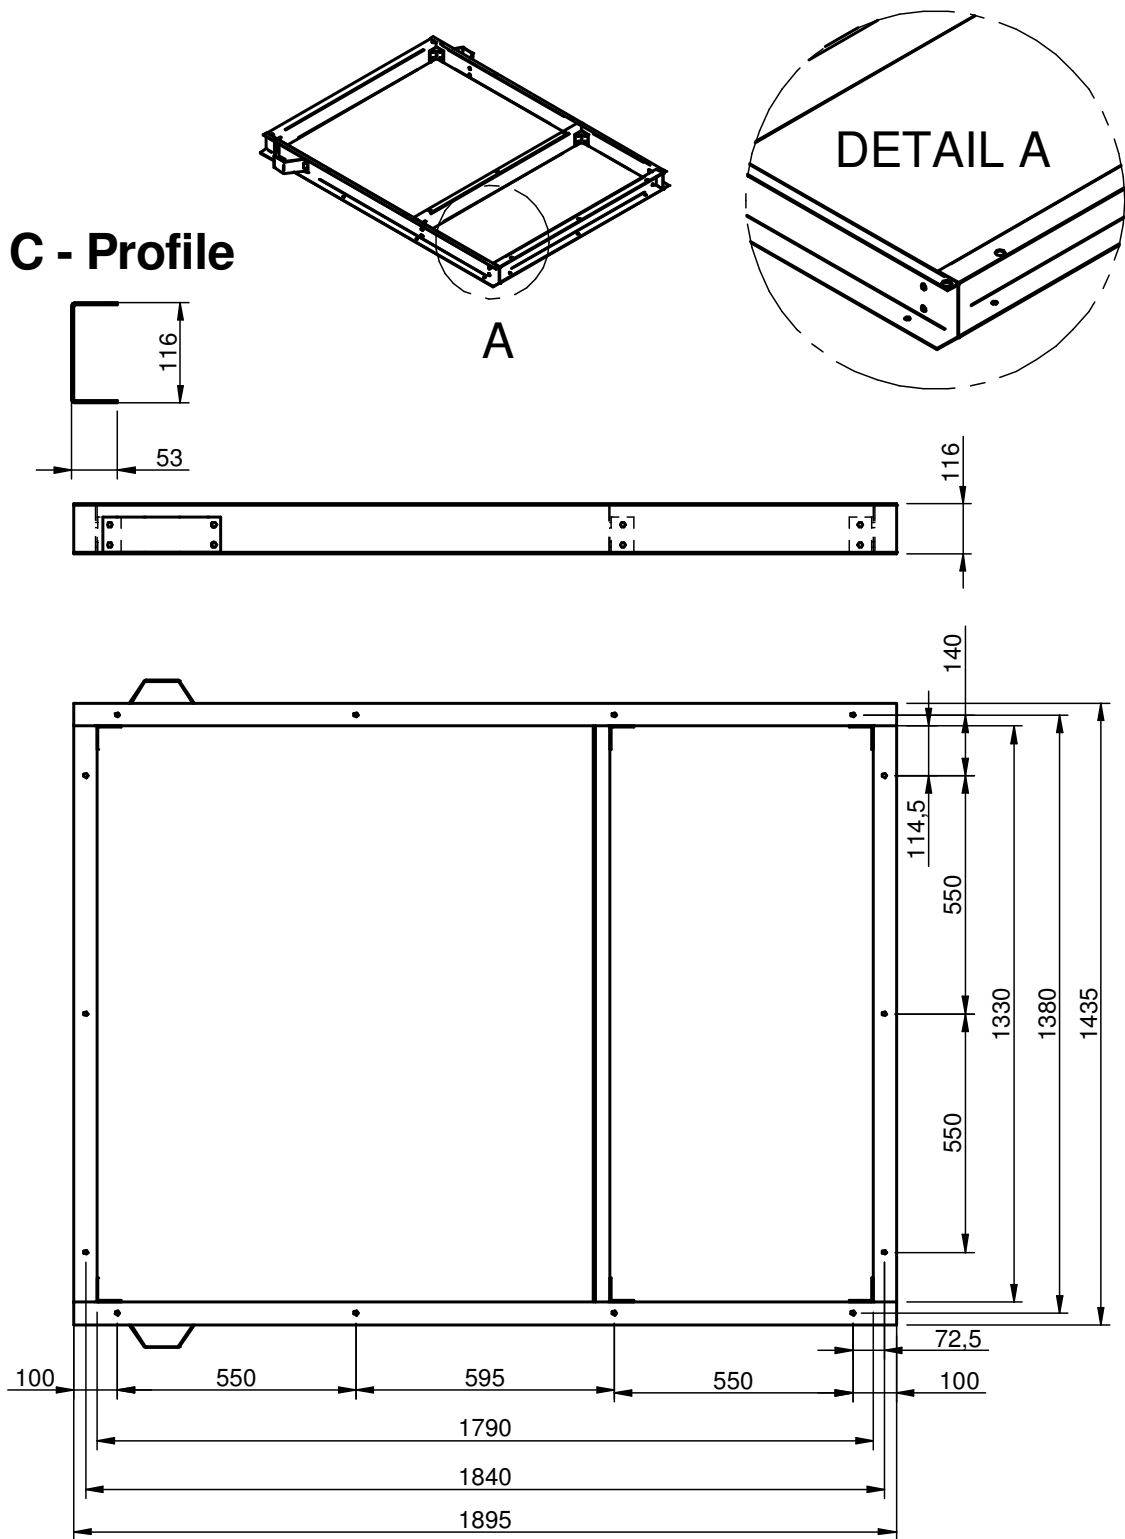


**C Frame
TR60 t/m 150 C / R**


scale: 1 : 20

8.5 TR Rooftop + Air Outlet module

8.5.1 TR24 R - 50 R Rooftop + Air outlet module

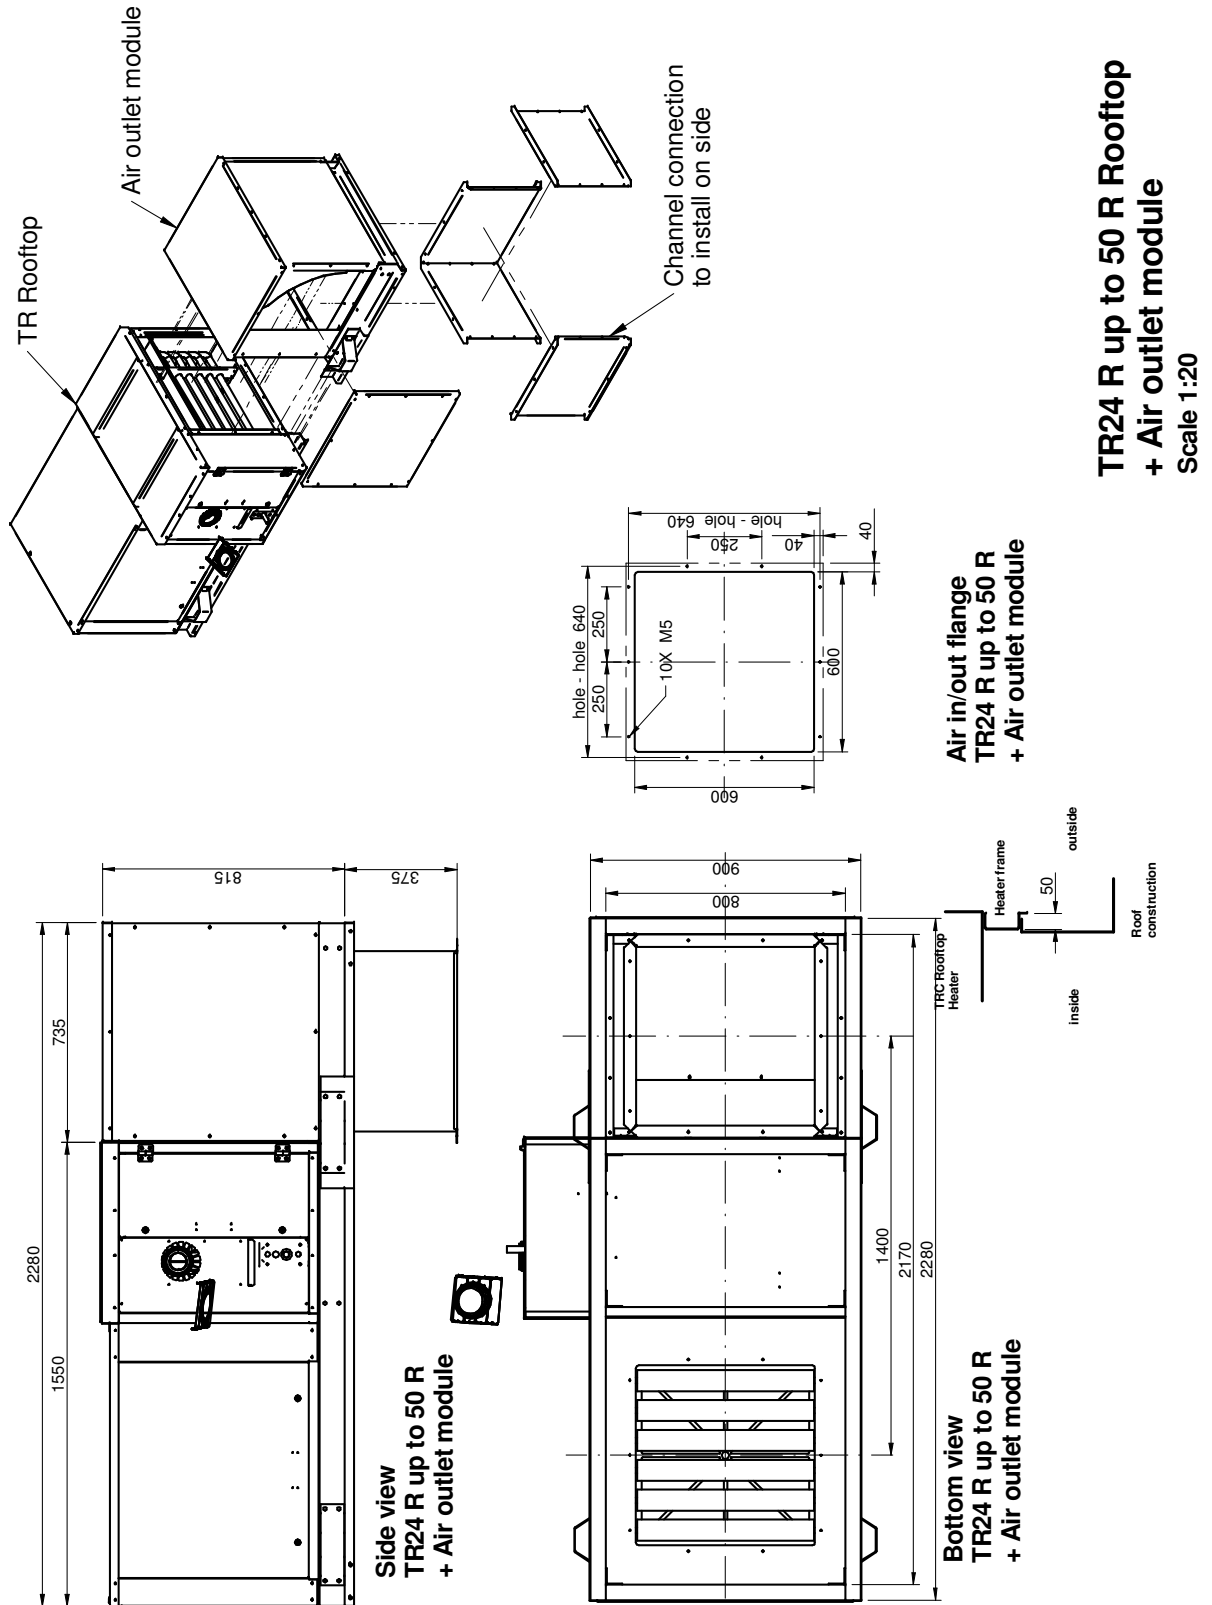

8.5.2 TR60 R - 100 R Rooftop + Air outlet module

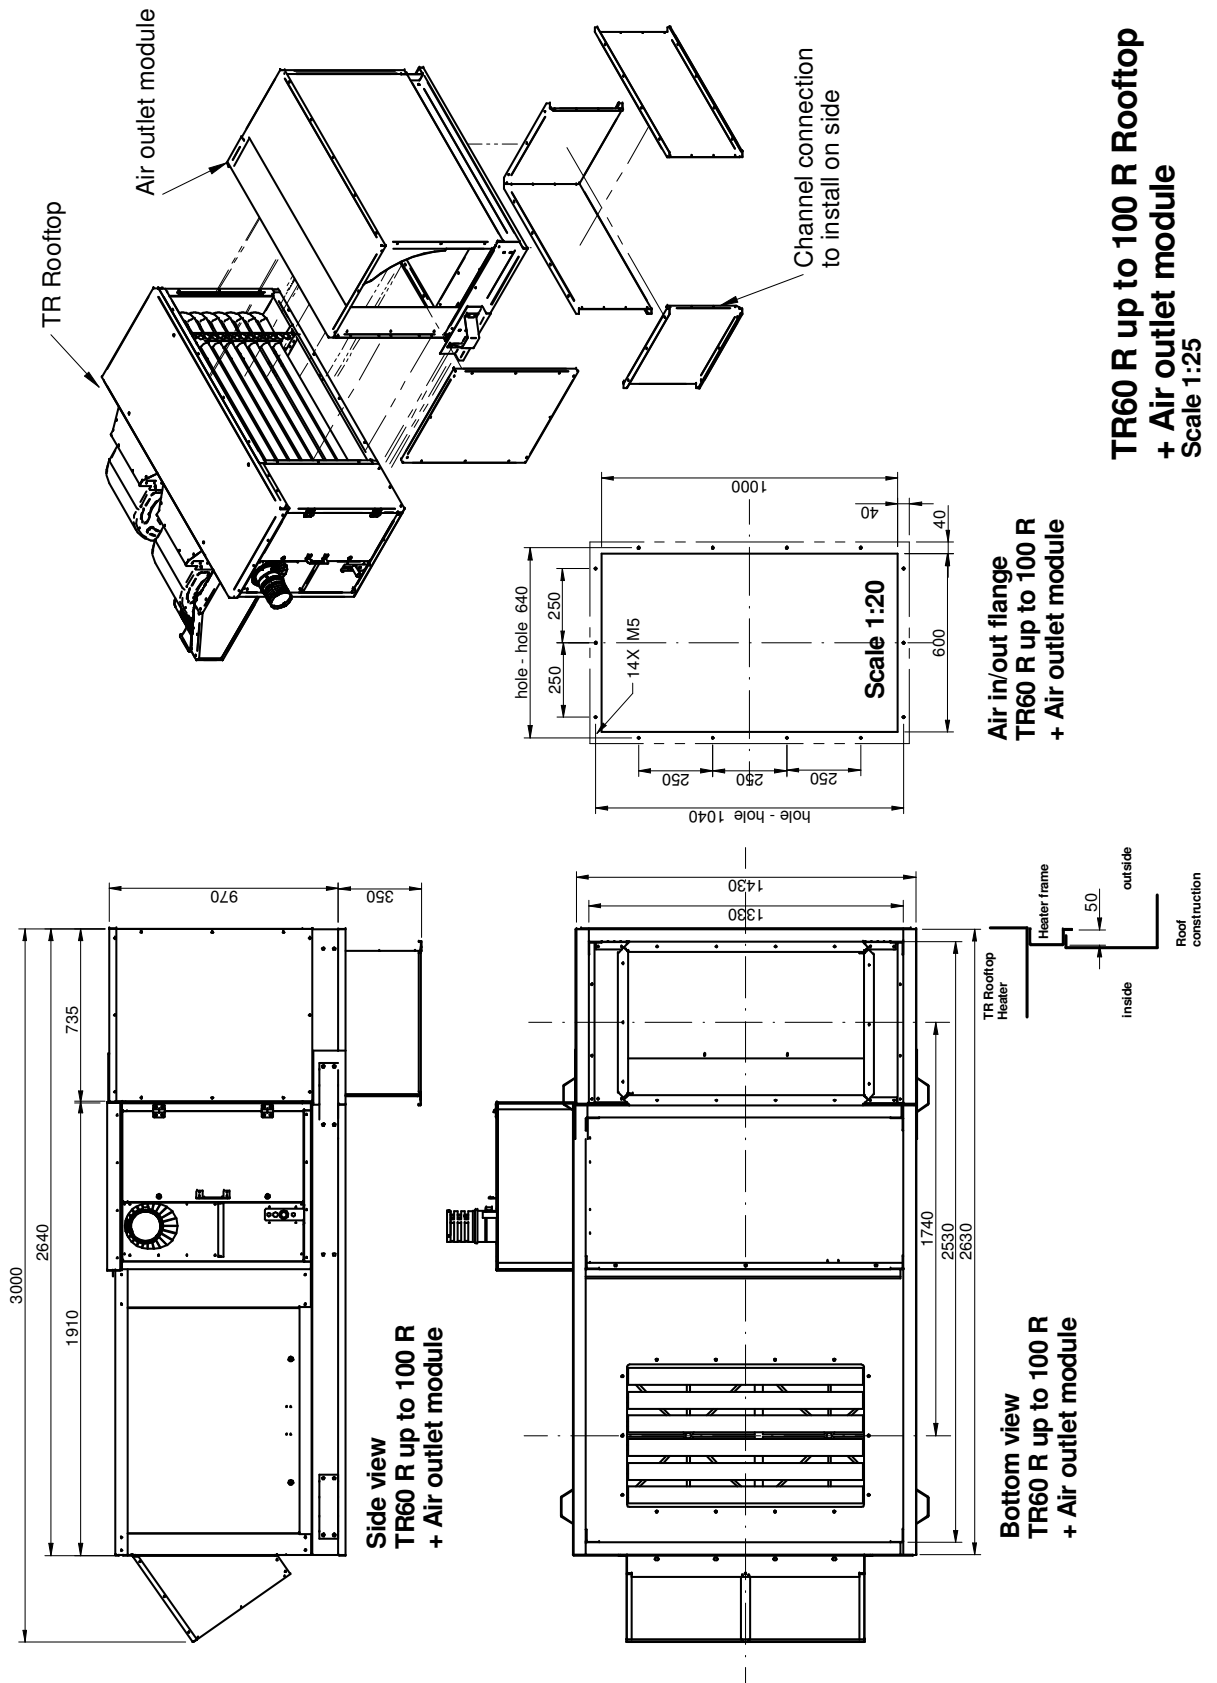

8.5.3 TR125 R - 150 R Rooftop + Air outlet module

